



**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK,  
DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN	
<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>		

The caution marking is located on the rear of the cabinet.

	<p>The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>
	<p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.</p>

## IMPORTANT SAFEGUARDS

### IMPORTANT

Use only cassettes marked VHS with this appliance.

### WARNING

To avoid fire or electric shock, do not expose this unit to rain or moisture.

### DEW WARNING

Moisture condensation may occur inside the unit when it is moved from a cold place to a warm place, or after heating a cold room or under conditions of high humidity. Do not use the VCR at least for 2 hours until its inside is dry.

### CAUTION

1. Do not attempt to open the cabinet. There are no parts inside you can service. Refer all servicing to qualified service personnel.
2. Slot and openings in the cabinet and at the side or bottom are provided for ventilation. To ensure reliable operation and to protect the unit from overheating these opening must not be blocked or covered. Avoid enclosed spaces such as book cases unless proper ventilation is provided.
3. Keep the unit away from the radiator heat sources.
4. Avoid using near strong magnetic fields.
5. Do not push objects of any kind into this appliance through the cabinet slot as they could touch dangerous voltage points or short circuit parts resulting in a fire or electric shock.
6. Never spill liquid of any kind on this unit. If liquid is spilled into the unit, consult qualified service engineer.
7. Use this unit in a horizontal (flat) position only.

## TABLE OF CONTENTS

PRECAUTIONS .....	2	RECORDING FUNCTION .....	5
DESCRIPTION OF CONTROLS .....	2	SPECIAL FEATURES .....	6
PREPARATION FOR USE .....	3	TROUBLESHOOTING GUIDE .....	7
SETUP .....	3	SPECIFICATIONS .....	7
PLAYBACK FUNCTION .....	4	MAINTENANCE.....	7

# PRECAUTIONS

## INSTALL LOCATION

For safety and optimum performance of your VCR:

- Install the VCR in a horizontal and stable position. Do not place anything directly on top of the VCR. Do not place the VCR directly on top of the TV.
- Shield it from direct sunlight and keep it away from sources of intense heat. Avoid dusty or humid places. Avoid places with insufficient ventilation for proper heat dissipation. Do not block the ventilation holes on the sides of the VCR. Avoid locations subject to strong vibration or strong magnetic fields.

## AVOID THE HAZARDS OF ELECTRICAL SHOCK AND FIRE

- Do not handle the power cord with wet hands.
- Do not pull on the power cord when disconnecting it from AC wall outlet. Grasp it by the plug.
- If, by accident, water is spilled on your VCR, unplug the power cord immediately and take the unit to our Authorized Service Center for servicing.
- Do not put your fingers or objects into the VCR cassette holder.

## MOISTURE CONDENSATION WARNING

Moisture condensation may occur inside the unit when it is moved from a cold place to a warm place, or after heating a cold room or under conditions of high humidity. Do not use the VCR at least for 2 hours until its inside is dry.

## FCC WARNING

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

## IMPORTANT COPYRIGHT INFORMATION


Unauthorized recording or use of broadcast television programming, video tape, film or other copyrighted material may violate applicable copyright laws. We assume no responsibility for the unauthorized duplication, use, or other acts which infringe upon the rights of copyright owners.

## A NOTE ABOUT RECYCLING

This product's packaging materials are recyclable and can be reused. Please dispose of any materials in accordance with your local recycling regulations. Batteries should never be thrown away or incinerated but disposed of in accordance with your local regulations concerning chemical wastes.

# DESCRIPTION OF CONTROLS

Front Panel

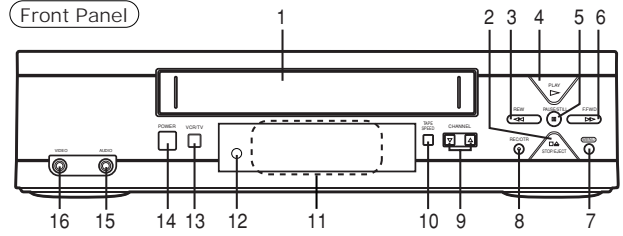


- |                         |                          |
|-------------------------|--------------------------|
| 1. Cassette Compartment | 9. CHANNEL (▲/▼) buttons |
| 2. STOP/EJECT button    | 10. TAPE SPEED button    |
| 3. REW button           | 11. Display Window       |
| 4. PLAY button          | 12. Remote Sensor        |
| 5. PAUSE/STILL button   | 13. VCR/TV button        |
| 6. F.FWD button         | 14. POWER button         |
| 7. MENU button          | 15. AUDIO Input jack     |
| 8. REC/OTR button       | 16. VIDEO Input jack     |

Display Window




- |                       |                     |
|-----------------------|---------------------|
| 17. POWER indicator   | 20. REC indicator   |
| 18. TAPE IN indicator | 21. TIMER indicator |
| 19. VCR indicator     | 22. CLOCK indicator |

Rear Panel

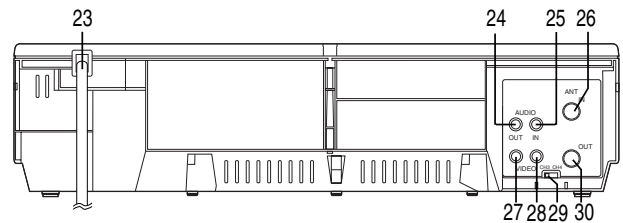

- |                    |                             |
|--------------------|-----------------------------|
| 23. AC Power Cord  | 27. VIDEO OUT jack          |
| 24. AUDIO OUT jack | 28. VIDEO IN jack           |
| 25. AUDIO IN jack  | 29. CH3/CH4 selector switch |
| 26. ANT. IN jack   | 30. ANT. OUT jack           |


Remote Control

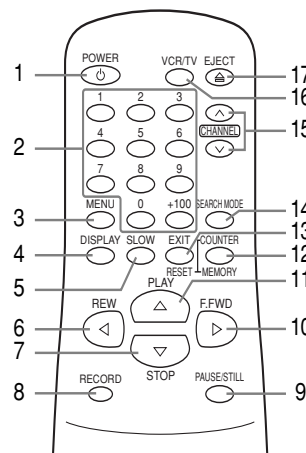

- |                           |
|---------------------------|
| 1. POWER button           |
| 2. NUMBER buttons         |
| 3. MENU button            |
| 4. DISPLAY button         |
| 5. SLOW button            |
| 6. REW button             |
| 7. STOP button            |
| 8. RECORD button          |
| 9. PAUSE/STILL button     |
| 10. F.FWD button          |
| 11. PLAY button           |
| 12. COUNTER/MEMORY button |
| 13. EXIT/RESET button     |
| 14. SEARCH MODE button    |
| 15. CHANNEL (▲/▼) buttons |
| 16. VCR/TV button         |
| 17. EJECT button          |

To insert the batteries

 Install two AA batteries matching the polarity indicated inside the battery compartment.



# PREPARATION FOR USE

## 1 Check contents

Make sure the package contains all of the accessories listed in as below.

### SUPPLIED ACCESSORIES

ACCESSORIES	PART NO.
Coaxial Cable	WPZ0901TM002
Remote Control Unit	NA301UD/NA351UD
Batteries	AA x 2
Plug Adapter	JTDE0Z0JD002


## 2 Situate VCR

Place the VCR in a stable, horizontal surface.

## 3 Connect VCR to TV

### VCR to TV Connection

1. Disconnect the AC power cord of the TV from the AC outlet.
  2. Disconnect the antenna or cable from the TV.
  3. Connect the antenna or cable to the ANT. IN jack of the VCR.
  4. Connect the VCR to the TV using the coaxial cable.
  5. Plug the AC power cords of the VCR and TV into the AC outlets.
- If you use the VCR in an area with a voltage 110V-127V, insert the power plug through the plug adapter provided.

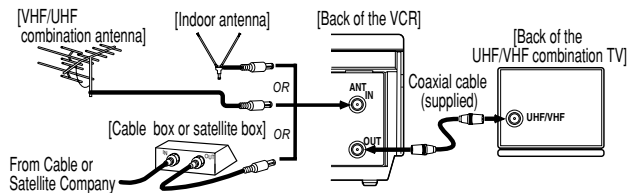

### VCR to AV TV connection using AUDIO/VIDEO Cables


#### Using Optional AUDIO/ VIDEO Output Jacks

With this connection, you can get better pictures and sounds when playing back a tape if your TV has A/V Input jacks. Please refer to your TV's owner's manual.

#### Using AUDIO/VIDEO Input Jacks

You can use the A/V input jacks on the front or the back of the VCR.


- To use the input jacks on the back of the VCR, select "L1" position by pressing [0], [0], [1] on the remote control or [CHANNEL (^/∇)].
- To use the input jacks on the front of the VCR, select "L2" position by pressing [0], [0], [2] on the remote control or [CHANNEL (^/∇)].

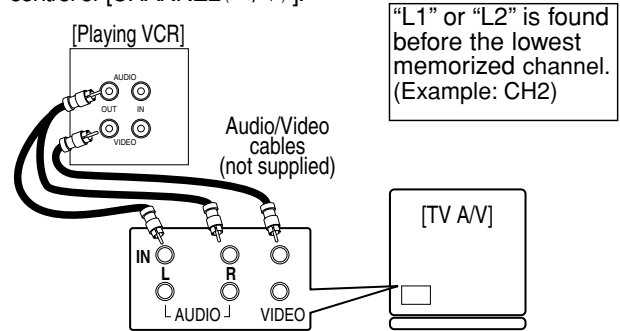

### SETTING THE CH3/CH4 SWITCH

#### If your TV does not have A/V terminals:

When the VCR is in the Playback mode or when the VCR is in the VCR mode, your TV will receive signals from the VCR on either channel 3 or 4. To use the VCR with your TV, set the selector switch to CH3 or CH4 (which is located in the back of your VCR), whichever is not used for normal broadcasts in your area. Then set your TV to the same channel.

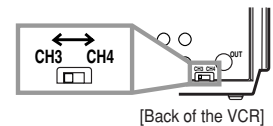

# SETUP

## AUTOMATIC CHANNEL SET UP

You can automatically program the tuner to scan only the channels you receive in your area.

- Channel memory programming is NOT needed when you connected the VCR to a cable box or satellite box as in "Connect VCR to TV". In this case, select the VCR and TV to channel 3 or 4 the same channel as the CH3 or CH4 switch on the back of the VCR. Then, the channel you want to record or view may be selected at the cable box or satellite box.
- Follow the steps below once. Repeat it only if there is a power failure or if the VCR is unplugged for more than 30 seconds. (In these cases, the programmed channels are erased.)
- You must follow the steps below before attempting to play or record a video tape. If you want to play or record a video tape BEFORE programming the tuner, you can cancel it by pressing [EXIT/RESET].

 
**1 You need to connect the antenna or cable to the VCR first. Then, connect the VCR power plug into a standard AC outlet.**

**2 Turn on the TV and set the TV to channel 3 or 4.** Now set the CH3/CH4 switch on the back of the VCR to match the channel selected on the TV.

**3 Turn on the VCR** by pressing [POWER]. It comes on that both the POWER and the VCR indicator.

**4 Select the On Screen Language ("ENGLISH" or "ESPAÑOL")**


by pressing [PLAY] or [STOP]. Then, press [F.FWD].



**5 Begin channel preset**

by pressing [F.FWD] once. The tuner scans and memorizes all active channels in your area.

 - The VCR distinguishes between standard TV channels and cable channels.



**6 After scanning,**

the tuner stops on the lowest memorized channel. The TV screen returns to TV mode.

- If "AUTO SET UP" appears on the TV screen again, check the cable connections. Press [F.FWD] once again and the VCR will begin preset again.

## TO SELECT A DESIRED CHANNEL

You can select the desired channel by using [CHANNEL (^/∇)] or directly pressing [Number] on the remote control.

#### Note for using the Number buttons:

- When selecting cable channels which are higher than 99, press [+100] first, then press the last two digits.
- You must precede single-digit channel numbers with a zero (For example: 02, 03, 04 and so on).

## TO PRESET THE CHANNEL AGAIN

- 1 Press **[MENU]** until the main menu appears.
- 2 Select **"CHANNEL SET UP"** by pressing **[PLAY]** or **[STOP]**. Then, press **[F.FWD]**.
- 3 Select **"TV" or "CATV"** by pressing **[PLAY]** or **[STOP]**. Then, press **[F.FWD]**. After scanning, the tuner stops on the lowest memorized channel.

## TO ADD/DELETE CHANNELS

When the VCR automatically program the tuner to scan only the channels you receive in your area, some channels may be skipped due to weak signal. You can manually add the channel in the VCR memory.

1 Press **[MENU]** until the main menu appears.


2 Select **"CHANNEL SET UP"** by pressing **[PLAY]** or **[STOP]**. Then, press **[F.FWD]**.

3 Select **"MANUAL SET UP"** by pressing **[PLAY]** or **[STOP]**. Then, press **[F.FWD]**.

4 Enter the desired channel number by pressing **[PLAY]** or **[STOP]**.

5 Add or Delete it from memory by pressing **[F.FWD]** or **[REW]** so that "ADD" or "DELETE" flashes on the TV screen accordingly.

6 Exit the Preset mode by pressing **[EXIT/RESET]**.

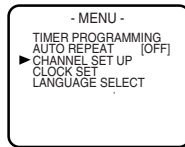

## TO CHANGE THE ON-SCREEN LANGUAGE

1 Press **[MENU]** until the main menu appears.

2 Select **"LANGUAGE SELECT"** by pressing **[PLAY]** or **[STOP]**. Then, press **[F.FWD]**.

3 Select **"ENGLISH" or "ESPAÑOL"** by pressing **[PLAY]** or **[STOP]**. Then, press **[EXIT/RESET]**.

## CLOCK SET UP


Set the clock accurately for proper automatic timer recording. We suggest that you use a TV or radio station as your time source.

1 Select main menu by pressing **[MENU]**. (If the clock is not set, the **CLOCK SET** menu appears first. In this case, follow step [3].)

2 Select **"CLOCK SET"** by pressing **[PLAY]** or **[STOP]**. Then, press **[F.FWD]**.

3 Set the clock.

Set the month	Press <b>[PLAY]</b> or <b>[STOP]</b> repeatedly. Then, press <b>[F.FWD]</b> .
Set the day	Press <b>[PLAY]</b> or <b>[STOP]</b> repeatedly. Then, press <b>[F.FWD]</b> .
Set the year	Press <b>[PLAY]</b> or <b>[STOP]</b> repeatedly. Then, press <b>[F.FWD]</b> . The day of the week will appear automatically.
Set the hour	Press <b>[PLAY]</b> or <b>[STOP]</b> repeatedly. Then, press <b>[F.FWD]</b> .
Set the minute	Press <b>[PLAY]</b> or <b>[STOP]</b> repeatedly. Then, press <b>[F.FWD]</b> .
Set the AM or PM	Press <b>[PLAY]</b> or <b>[STOP]</b> repeatedly.

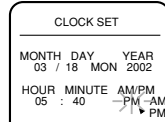


- To go back one step, press **[REW]**.

4 Start the clock by pressing **[EXIT/RESET]** or **[F.FWD]**.

# PLAYBACK FUNCTION
 
## NORMAL PLAYBACK

- 1 Insert the prerecorded tape. The VCR will turn on. If the safety tab has been removed, the VCR will start playback automatically.



- 2 Turn on the TV and set the TV to channel 3 or 4. Now set the CH3/CH4 switch on the back of the VCR to match the channel selected on the TV.

- 3 Begin playback by pressing **[PLAY]**.

- Tracking adjustment will be set automatically (Digital Tracking function) when you start playback. To adjust the tracking manually, press **[CHANNEL (^/v)]** on the VCR.
- When a tape has reached the end, the VCR will rewind the tape to the beginning, eject the tape, and turn off the VCR automatically.
- S-VHS Quasi Playback (SQPB): This unit allows you to view a tape recorded in S-VHS format. (Noise lines may appear on the picture.)

- 4 To stop playback, press **[STOP]**.

## STILL/SLOW

You can freeze the picture on TV screen by pressing **[PAUSE/STILL]** during playback.

- You can advance the picture by one frame at a time by pressing **[PAUSE/STILL]** during the still mode.
- If the picture begins to vibrate vertically during the still mode, stabilize the picture by pressing **[CHANNEL (^/v)]**.
- If the picture is distorted or rolling vertically, adjust the vertical hold control on your TV, if equipped.

You can see the slow motion by pressing **[SLOW]** during playback or the still mode.

- If the noise bar appears on the TV screen, you can reduce it by pressing **[CHANNEL (^/v)]**.
- After the VCR has been in Still/Slow mode for 5 minutes, it will stop automatically to protect the tape and the video head from damage.
- To return playback, press **[PLAY]**.

## AUTO REPEAT PLAYBACK

This feature allows you to play a tape over and over.

1 Select main menu by pressing **[MENU]**.

2 Select **"AUTO REPEAT"** by pressing **[PLAY]** or **[STOP]**.

3 Begin auto repeat playback by pressing **[F.FWD]** so that **[ON]** appears next to "AUTO REPEAT".

- If the on-screen menu still remains, press **[EXIT/RESET]** exit the menu.
- To cancel the Auto repeat mode, press **[F.FWD]** at step [3] so that **[OFF]** appears next to "AUTO REPEAT".
- When you set the Auto repeat mode to **[ON]** while the Counter memory mode is **ON**, the VCR will exit the Counter memory mode automatically.

## SEARCH FUNCTIONS

### PICTURE SEARCH

If you want to skip or repeat a scene during playback, press **[F.FWD]** or **[REW]**.

- Press it again and the VCR will now search in super high speed. (in the LP/SLP modes only)

## INDEX SEARCH


The index signal is recorded on the tape automatically when the recording is started. If you want to view a recording at a specific start point, it can easily be done.

**1 Press [SEARCH MODE]** so that the Index Search menu appears.

**2 Enter your desired number** by pressing [PLAY] or [STOP] within 30 seconds.

**3 Press [F.FWD] or [REW]** to start index search. If you want to go in the forward direction, press [F.FWD]. If you want to go in the reverse direction, press [REW].

- After index search, the VCR will play the tape automatically.

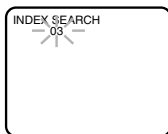

## TIME SEARCH


This feature allows you to fast forward or rewind the tape for a desired length of time.

**1 Press [SEARCH MODE]** so that the Time Search menu appears.

**2 Enter your desired time** to skip by pressing [PLAY] or [STOP] within 30 seconds.

**3 Press [F.FWD] or [REW]** to start time search. If you want to go in the forward direction, press [F.FWD]. If you want to go in the reverse direction, press [REW].

- After time search, the VCR will play the tape automatically.

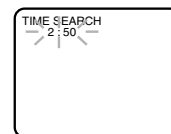


# RECORDING FUNCTION

It may be unlawful to record playback copyrighted material without the consent of the copyright owner.

### Accidental erasure prevention

 To prevent accidental recording on a recorded cassette, remove its record safety tab. To record on it later, cover the hole with cellophane tape.



Record safety tab

### Before recording, make sure:

- The desired channel is selected by pressing [Number] on the remote control or the [CHANNEL (^/v)]. (If you connected the VCR to a cable box or satellite box as in "VCR to TV connections" on page 3, select the VCR to channel 3 or 4 the same channel as the CH3 or CH4 switch on the back of the VCR. Then, select the channel you want to record at the cable box or satellite box. In this case, you can ONLY record and view the SAME channel.)
- There is a tape with its safety tab into the VCR.
- The desired recording speed is selected in SP(standard play) or SLP(super long play) mode by pressing [TAPE SPEED] on the VCR.

Tape Speed	Recording/Playback Time		
	Type of tape	T60	T120
SP mode	1hour	2hours	2-2/3hours
SLPmod	3hour	6hour	8hour

## VIEWING AND RECORDING THE SAME PROGRAM

**1 Begin the recording** by pressing [RECORD].

 
- To temporarily stop recording or resume it, press [PAUSE/STILL]. After the VCR has been in Pause mode for 5 minutes, it will stop automatically to protect the tape and the video head from damage.

**2 Press [STOP] when recording is completed.**

## OTR(One Touch Recording)

This feature allows you to set the recording length simply by pressing [REC/OTR] on the VCR.

**1 Begin OTR** by pressing [REC/OTR] on the VCR repeatedly until the desired recording length appears.



## TIMER RECORDING

You may set the VCR to start recording while you are away. You can set seven programs to record on specific days, daily or weekly within a 1 year period.

**1 Insert a tape with its safety tab** into the VCR.

**2 Select main menu** by pressing [MENU].

 
**3 Select "TIMER PROGRAMMING"** by pressing [PLAY] or [STOP]. Then, press [F.FWD].

- If you have not yet set the clock, "CLOCK SET" appears. If so, follow the steps [3] and [4] in "CLOCK SET UP" section. Then, set the timer recording.

**4 Set the timer.**


### Set the program number (1-7)

Program number which is not set up flashes. Press [PLAY] or [STOP] repeatedly for the desired program number. Then, press [F.FWD].



### Select once, daily or weekly recording

 - **For once:** Press [PLAY] or [STOP] to point to "ONCE".
  - **For daily (Monday~Friday):** Press [PLAY] or [STOP] to point to "DAILY".
  - **For weekly:** Press [PLAY] or [STOP] to point to "WEEKLY".
- Then, press [F.FWD].



### Set the date

First, press [PLAY] or [STOP] for the month. Then, press [F.FWD]. Next, press [PLAY] or [STOP] for the day. Then, press [F.FWD].

### Set the start time

First, press [PLAY] or [STOP] for the hour. Then, press [F.FWD]. Next, press [PLAY] or [STOP] for the minute. Then, press [F.FWD]. And then, press [PLAY] or [STOP] for AM or PM. Then, press [F.FWD].

### Set the end time

Follow the instructions of "Set the start time" to set the end time.

### Set the channel number

 
Press [PLAY] or [STOP] repeatedly for the desired channel number. Then, press [F.FWD].

- If you connected the VCR to a cable box or satellite box as in "Connect VCR to TV" on page 3, select the VCR to channel 3 or 4 the same channel as the CH3 or CH4 switch on the back of the VCR.

Then, select the channel you want to record at the cable box or satellite box. Leave the cable box or satellite box on for timer recording.

### Set the tape speed

Press [PLAY] or [STOP] repeatedly for the desired tape speed. Then, press [F.FWD].



- To go back one step, press [REW].

**5 To set another program,** repeat step [4]. To exit, press [EXIT/RESET].

**6 Press [POWER] to set the timer.** The TIMER indicator on the VCR comes on.

## HINTS FOR TIMER RECORDING

- If there is a power failure or the VCR is unplugged for more than 30 seconds, the clock setting and all timer settings will be lost.
- If the tape runs out before the end time, the VCR will switch to the Stop mode immediately, eject the tape and the VCR power will be turned off. The TIMER indicator will flash.
- If a tape is not in the VCR or does not have the safety tab, the TIMER indicator flashes and timer recording cannot be performed. Please insert a recordable tape.

### TO STOP AN AUTOMATIC TIMER PROGRAM ALREADY STARTED

Press [STOP/EJECT] on the VCR.

### TO CHECK, CORRECT, OR CANCEL AN AUTOMATIC TIMER PROGRAM

- 1 Turn the power on by pressing [POWER].
- 2 Select main menu by pressing [MENU].
- 3 Select "TIMER PROGRAMMING" by pressing [PLAY] or [STOP]. Then, press [F.FWD].
- 4 Select the program number which you want to check by pressing [PLAY] or [STOP]. The details of the selected program appears on the TV screen.

- Go to the digit you want to change by pressing [F.FWD] or [REW]. Then, enter correct numbers by pressing [PLAY] or [STOP].
- You may cancel the entire program by pressing [REW] during the program number flashes.


5 Press [EXIT/RESET] to exit.

6 Press [POWER] to return to timer stand-by mode.

## COUNTER MEMORY FUNCTION

Use this feature to memorize the beginning of recording start point.

- 1) Press [COUNTER RESET] on the remote control to reset the counter.
  - 2) Press [COUNTER MEMORY] on the remote control so that "M" appears on the TV screen.
  - 3) Record the program.
  - 4) After recording, press [STOP] then [REW].
- When "0:00:00" is reached, rewinding operation goes to stop. And you can view the recording program.
  - [COUNTER MEMORY] does not function if the Auto repeat mode is set to [ON]. In this case, set the Auto repeat mode to [OFF].
  - To cancel the Counter memory mode, press [COUNTER MEMORY] so that "M" disappears from the TV screen.

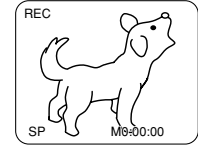


## SPECIAL FEATURES

### COPYING A VIDEO TAPE

You can make copies of video tapes made by friends or relatives for your enjoyment.

**Warning:** Unauthorized recordings of copyrighted video tapes may be an infringement of copyright laws. Connect the recording VCR (this unit), the playing VCR (another source) and your TV using the following diagram.

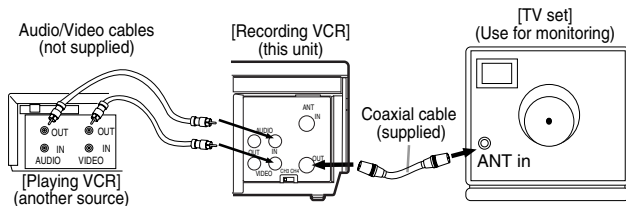

- 1) Insert a pre-recorded tape into the playing VCR.
  - 2) Insert a tape with its safety tab into the recording VCR.
  - 3) Press [TAPE SPEED] on the recording VCR to select the desired recording speed (SP/SLP).
  - 4) Select the "L1" or "L2" position on the recording VCR. See page 3, under "Using AUDIO/VIDEO Input jacks".
  - 5) Press [REC/OTR] on the recording VCR.
  - 6) Begin playback of the tape in the playing VCR.
- For best results during dubbing, use the VCR's front panel controls whenever possible. The remote control might affect the playing VCR's operation.
  - Always use video-quality shielded cables with RCA-type connectors. Standard audio cables are not recommended.
  - You can use a video disc player, satellite receiver, or other audio/video component with A/V outputs in place of the playing VCR.

### TO MONITOR THE RECORDING

- 1) Turn on the TV and set the TV to channel 3 or 4. Now set the CH3/CH4 switch on the back of the VCR to match the channel selected on the TV.
- 2) Press [VCR/TV] on the recording VCR so that the VCR indicator comes on.

### AUTO REWIND

When a tape has reached the end during recording, playback, or fast-forward, the tape will automatically rewind to the beginning. After rewinding finishes, the VCR will eject the tape and turn itself off.

- The VCR will not rewind the tape automatically during timer recording or One Touch Recording.
- When the Counter Memory is activated, the tape will rewind to the M0:00:00 and the VCR will go into the Stop mode.

### REAL TIME TAPE COUNTER

- This shows the elapsed recording or playback time in hours, minutes, and seconds. (The displayed time will not change during blank portions on the tape.)
- The indication will appear when the tape is rewound further than "0:00:00" on the tape counter.

## TROUBLESHOOTING GUIDE

If you have followed the instructions contained in this manual and have difficulty in operating your VCR, locate the **PROBLEM** in the left column below. Check the corresponding **CORRECTIVE ACTION** column to remedy the problem.

PROBLEM	CORRECTIVE ACTION
No power.	<ul style="list-style-type: none"> <li>• Make sure the power plug is connected to an AC outlet.</li> <li>• Make sure the power is turned on.</li> </ul>
Timer recording is impossible.	<ul style="list-style-type: none"> <li>• Make sure the timer recording is set correctly.</li> <li>• Make sure the power is off.</li> <li>• Make sure the VCR clock is set correctly.</li> </ul>
Cannot go into Record mode.	<ul style="list-style-type: none"> <li>• Make sure the tape has a safety tab. If needed, cover the hole with cellophane tape.</li> </ul>
Playback picture is partially noisy.	<ul style="list-style-type: none"> <li>• Adjust tracking control for a better picture by pressing [CHANNEL (▲/▼)] on the VCR.</li> </ul>
Cannot view a tape but the audio is OK.	<ul style="list-style-type: none"> <li>• Head cleaning may be necessary. Refer to "AUTO HEAD CLEANING".</li> <li>• Make sure the VCR is not in the Menu mode.</li> </ul>
No or poor playback picture.	<ul style="list-style-type: none"> <li>• Select channel 3 or 4 at your TV, then press [VCR/TV] so that the VCR indicator on the VCR comes on.</li> <li>• Fine tune your TV.</li> </ul>
TV programs cannot be seen normally.	<ul style="list-style-type: none"> <li>• Re-check the ANT. IN and ANT. OUT connections. See page 3.</li> <li>• Press [VCR/TV] so that the VCR indicator on the VCR disappears.</li> </ul>
No VCR operation from the infrared Remote Control.	<ul style="list-style-type: none"> <li>• Make sure the power plug is connected to an AC outlet.</li> <li>• Check batteries in remote control.</li> </ul>
Video or color fades in and out when making a copy of a video tape.	<ul style="list-style-type: none"> <li>• You cannot copy a copyrighted video tape. You are experiencing copy guard protection.</li> </ul>

## SPECIFICATIONS

Operating temperature :	5°C~40°C (41°F~104°F)	Power requirement :	110-220V, 50/60Hz
Converter output :	VHF Channel 3 or 4.	Power consumption :	14 Watts
		Dimensions :	W 14-1/4" (360mm)
			H 3-5/8" (92mm)
			D 8-1/2" (216mm)
		Weight :	4.4 lbs. (2.0 Kg.) (approx.)

- Designs and specifications are subject to change without notice.
- If there is a discrepancy between languages, the default language will be English.

## MAINTENANCE

### SERVICING

Should your VCR become inoperative, do not try to correct the problem by yourself. There are no user-serviceable parts inside. Turn off, unplug the power plug, and take the unit to our Authorized Service Center.

### CABINET CLEANING

- Wipe the front panel and other exterior surfaces of the VCR with a soft cloth immersed in lukewarm water and wrung dry.
- Never use a solvent or alcohol. Do not spray insecticide liquid near the VCR. Such chemicals may cause damage and discoloration to the exposed surfaces.

### AUTO HEAD CLEANING

- Automatically cleans video heads as you insert or remove a cassette, so you can see a clear picture.
- Playback picture may become blurred or interrupted while the TV program reception is clear. Dirt accumulated on the video heads after long periods of use, or the usage of rental or worn tapes can cause this problem. If a streaky or snowy picture appears during playback, the video heads in your VCR may need to be cleaned.

1. Please visit your local Audio/Video store and purchase a good quality VHS Video Head Cleaner.
2. If a Video Head Cleaner does not solve the problem, consult our nearest Authorized Service Center.

### NOTES:

- Remember to read the instructions included with the video head cleaner before use.
- Clean video heads only when problems occur.

