



Android  
Lollipop 5.1



Android TV User Manual



2GB RAM  
8GB ROM



## Getting Started

Powering and Setting Up Your 247 TV Box



247 TV BOX



HDMI Cable



REMOTE



POWER

## Connecting Cables & Power

1. Connect the TV Box to the HDMI cable and Power Cord.
2. Connect HDMI cable to the back of your smart TV.
3. Connect the power cord to AC power.  
(After the power cable is connected, power led turn to blue on TV Box)



Power  
Cord

HDMI  
Cord



Connect HDMI to your TV

## Direct Router Ethernet Connection

1. Connect an Ethernet cable (not included) to TV Box
2. Connect other end of Ethernet cable to your internet router.  
Your net connection should be automatically connected.



Direct Router Ethernet Connection

### Or Connect To Your WIFI Network

1. From your home menu, click on "Settings"
2. Using your remote, scroll and click on "Network"
3. Select "WiFi" to open the WiFi Function
4. Choose and click on your own WiFi account
5. Enter your password to connect to your network



Go to settings



Click on Network



Choose Your WiFi Network



Enter Your WiFi Account Password

### Accessing Your TV Media Channels

Once you complete your setup, click on the Home button  on your remote.

Click on "KODI" network and enjoy unlimited movies, TV channels, sports, kids and international channels.



## Your 247 TV Box Remote

### 1. TV Box On / Off Switch

You turn on and off your TV Box by pointing the remote toward your TV Box.

### 2. Home Button

You can turn back to your home screen from any menu by clicking this Home button.

### 3. Navigate / Enter Button

You can use this arrow navigate button to move up, down, left and right. Click the OK button to enter your choice.

### 4. Mute Button

This MUTE button allows you to mute the sound of your TV.

### 5 & 6. TV On / Off Switch (visit: [www.247tvbox.com/install](http://www.247tvbox.com/install) for video directors)

You can program your remote to control the main functions of your TV (On/Off and Volume controls).

1. Click and Hold the TV On/Off Switch for 8 seconds (until flashing red stays solid bright Red).

2. Press and release the button that you want to program on your TV Box remote (Power, Vol+, Vol-). The power button should start blinking.

3. If you pressed the power button, then hold your other "TV" remote power button directly opposite your TV Box remote and press the Power button.

4. Press the power button from your TV Box when it start blinking.

5. Repeat this again function if you want to program the volume up and down by pressing the volume up and down from your TV remote.



### 7. Return / Back

You can return back to the previous menu by clicking this button.

### 8. Back Button

You can click this button to click back and remove entered digits from any menu.



247 Smart Life LLC

Dallas, Texas USA

Web: [247SmartLife.com](http://247SmartLife.com)

Support: [support@247smartlife.com](mailto:support@247smartlife.com)

Phone: (972) 914-6060