



247-ES-CAM4A Quick Start Guide

247-ES-CAM4A Quick Start Guide



**RISK OF ELECTRIC SHOCK
DO NOT OPEN**



**CAUTION TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK). NO USER SERVICE-
ABLE PARTS INSIDE, REFER SERVICING TO**



This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

Warning

To prevent Fire or Shock Hazards, Do Not Expose This PRODUCT to Rain or Moisture. Camera shall not be exposed to dripping or splashing and no object filled with liquids, such as vases, shall be placed on the apparatus.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.



247-ES-CAM4A Quick Start Guide



Regulatory Commission Notices for USA

This equipment has been tested and found to comply with the limits for a digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- *Reorient or relocate the receiving antenna.*
- *Increase the separation between the equipment and receiver.*
- *Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.*
- *Consult the dealer or an experienced radio/TV technician for help.*

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

The shielded interface cable recommended in this manual must be used with this equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.



247-ES-CAM4A Quick Start Guide

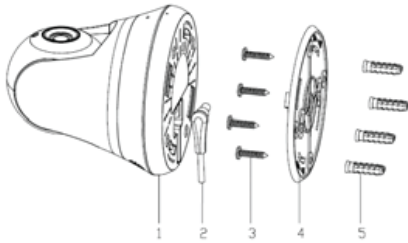

To mount the 247 ES-CAM4A to the wall, place the camera in a position to ensure the most comprehensive view for video monitoring.

Unscrew the base of the camera and remove the plate. The dots on the base of the camera indicate the location of the expansion bolts. Insert the expansion bolts into the drilled holes.

Use a screwdriver to tighten or loosen the screws and secure the 247 ES-CAM4A and connect the device cables.



247-ES-CAM4A Quick Start Guide



1. Download “iSecurity+” App

To get started, download the iSecurity+ app from Apple’s App store or the Google Play Store on your smart phone or tablet.

2. Connect to power



Connect the ES-CAM4A to the AC power adapter, then plug your power cord into the electrical outlet.



247-ES-CAM4A Quick Start Guide



3. WiFi Setup Mode

The Setup button will glow green on initial setup.



The "Wi-Fi Setup" LEDs in the front of the camera will flash green and orange alternatively and the ES-CAM4A will rotate when the camera is ready for setup.

(This may take up to 2 minutes when the camera is first powered on.)

 


247-ES-CAM4A Quick Start Guide

4. Connect Your Smart Phone To ES-CAM4A

Go to your device's settings ->

Under the Wi-Fi setting, connect to the ES-CAM4A XXXX (last 4 digits of Cam ID) network.

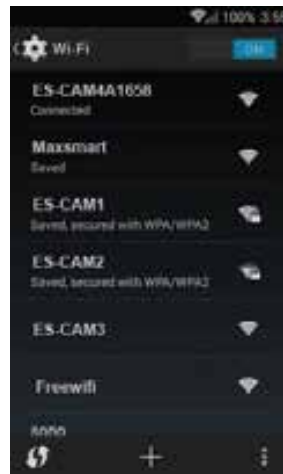

From your WiFi connection on your smart phone, click to connect to your (ES-CAM4A XXX) Camera.

247-ES-CAM4A Quick Start Guide

5. Launch iSecurity+ App

Once your device establishes connection to the ES-CAM4A, (usually takes around 30 seconds,) launch the iSecurity+ App. If you don't see the pop up prompt, please close the app and re-launch it.



*iSecurity+ app will automatically detect your camera.
When prompted, click 'Yes' to setup your camera.*



247-ES-CAM4A Quick Start Guide



6. Setup Wizard

Follow the instructions in the Camera Setup Wizard to complete installation.



Setup Complete

Once you see the page below, the setup process has been completed.

 
You can use your iOS/ Android devices to access the camera anywhere in the world. Make sure your phone has access to the internet via 3G, 4G or Wi-Fi for internet connection.



247-ES-CAM4A Quick Start Guide

7. Using iSecurity+ Main Features Window


Please enter your user name and password, created during the setup process to access your ES-CAM4A.

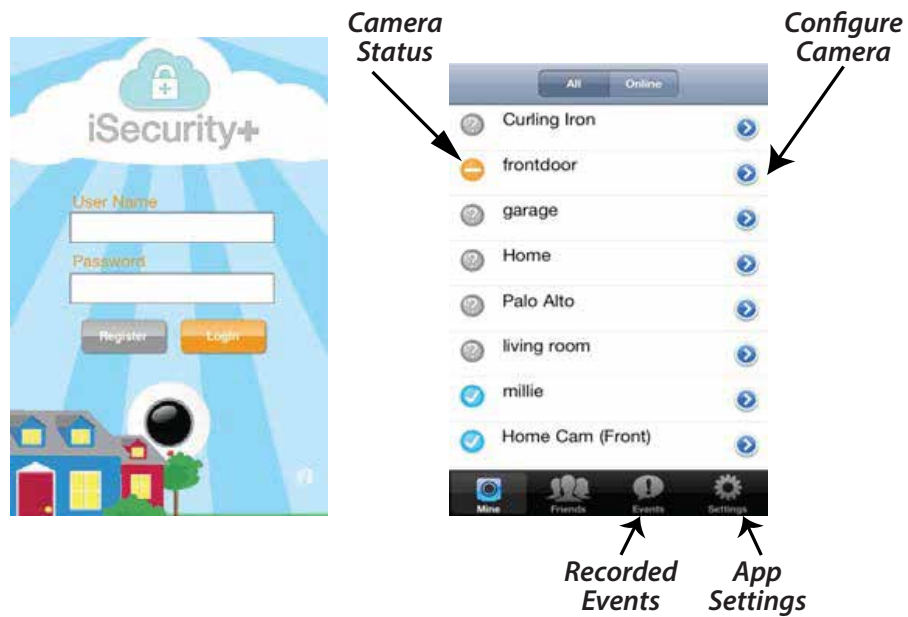

247-ES-CAM4A Quick Start Guide

8. Camera Tilt and Zoom Viewer Features

Swipe directional controls to change the camera Pan & Tilt view.

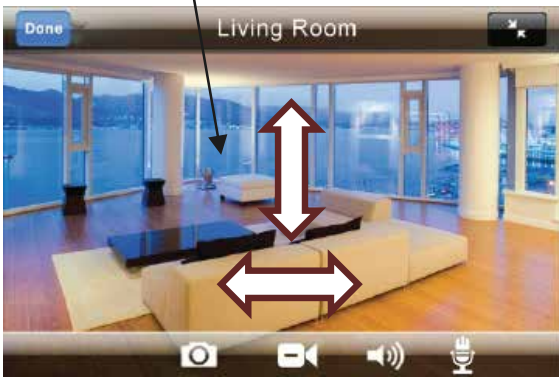

*Snap
Picture*

*Video
Record*

*Speaker
On/Off*

*Mic
On/Off*


(Hold down to speak)

Zoom Function

Zooming In - Touch the screen with two fingers together and slide outward at an angle and the image will zoom in.



Zooming Out- Touch the screen with two fingers apart and slide inwards at an angle and it will zoom out.

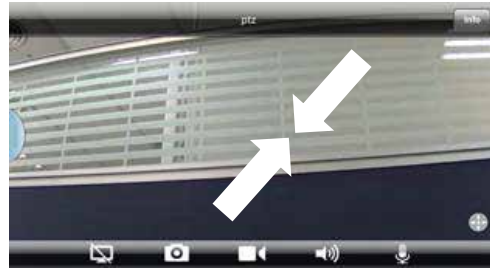

247-ES-CAM4A Quick Start Guide

Troubleshooting



*LED Status Indicators
During Wi-Fi Setup Mode
Flashing **Green** & **Orange**: Setup mode "ON"*

***Orange**: Setup mode initializing
Light Off: Setup mode off*



During Normal Operation

***Green**: Connected to iSecurity+*

***Orange**: Connected to local Network*

***Flashing Orange**: Not connected to any network*

Setup button

Press and hold the button for 5 seconds to reset the camera.

Press and hold the button for 15 seconds to factory reset the camera back to default setting.



247-ES-CAM4A Quick Start Guide

Safety Information

Do not point the camera directly at the sun, or else it will damage the image sensor.

Keep the camera away from heat to avoid electric shock.

Keep the camera away from rain and moisture.

Do not attempt to open, dismantle, repair, or service the camera. Doing so may cause electric shock and other hazards.

Any evidence of misuse, abuse, or tampering will void the Limited Warranty.

To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body. Use only the enclosed power adapter.

Designed and Distributed by
247HelpAlert LLC
Irvine, California, USA
www.247HELPALERT.COM

