

4max

130.127 MAX MXI
Portable Bluetooth Speaker
Instruction manual



NOTE :

- Please use and store this product at room temperature
- Please do not expose this product to rain or wet conditions
- Please do not throw or drop this product.
- Please do not self-dismantle or try to repair the product
- Please do not use chemical solvent to clean the product
- Please do not expose the Lithium battery to fire.
- Long time continuous playback at High Volume may cause hearing impairment - please adjust the volume appropriately for continuous playback

NOTE:

Improper Battery replacement may cause explosion - Only replace with same or equivalent battery.

Please do not expose the battery to sunlight, fire or excessive heat.

What's In The Box :

- 1 Speaker - 1 pc
- 2 Lanyard - 1 pc
- 3 Micro USB Charging Cable - 1 pc 4 User Manual - 1 pc

Features :


- Connects Seamlessly through Bluetooth
- Can play directly via Micro SD Card
- Built in 600mAh rechargeable lithium battery.
- Audio Wattage : 3W.
- Approx 3 hours Of Continuous Playback
- Built-in microphone for mobile hands free use.
- Comes with a Lanyard and is portable enough to carry about easily.

Product Parameters

Shell Parameters	
External Interface	Micro USB port, Micro SD card slot
product Specification	
Speaker Net Weight	162g (Including battery inside)
Basic Parameters	
Product type	Portable Bluetooth Speaker
Speaker driver	1.5inch magnetic trumpet
Volume control way	Buttons
Bluetooth Version	Bluetooth 4.2
Storage type	Max.32GB micro SD card
Power supply	Built-in 600mAh rechargeable lithium battery
Technology Parameters	
Output power	15W
Frequency Response	80 Hz—18KHz
USB	USB2.0 compatible with IJSB 1.1
Charging time	Over DC 5V—1A takes around 2 hours
playing time	Over 4 hours with Mid-volume
Functions	
File formats	MP3, WMA
Micro SD playback	Support
Bluetooth playback	Support
Card reader	Support

Buttons Instruction

previous /VOL-: press to previous song, press and hold to decrease the volume

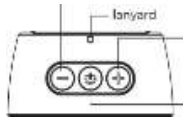


Next /VOL+: Press to next volume, press and hold to increase the volume.

Power button: Press and hold 2 seconds to power on/off, Tap the button twice rapidly to exchange different modes, press to play or pause.

USB port: Connect by USB cable to charge or data transfer.

Reset Hole: Press the button with a pen/pencil to restart the speaker if necessary.

Micro SD card slot : Insert micro SD card to play music stored on micro SD card

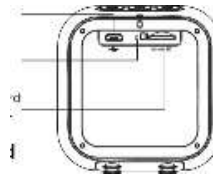

Connecting speaker and mobile phone:

Power on the speaker, and open the device's Bluetooth function, then searching the connecting name of "Monk", and click it to connect When a call comes in, press "power" to receive the call, then press it again to end the call ;
Press and hold "power" to reject the call
Press and hold "+" & at the same time, can disconnect the bluetooth
Press the "power" key can reconnect the bluetooth

Declaration of Conformity

Manufacturer:
TRONIOS BV
Bedrijvenpark Twente 415
7602 KM - ALMELO

+31 (0)546589298
+310546589298

The Netherlands

Product number: 130.127

Product Description:
MAX MXI Portable Bluetooth Speaker

Regulatory Requirement:
EN 62479:2010 EN60065:2014
ers1EN301489-mv1.9.2
ETSI EN301489-17v2.2.1
ETSI EN300328V1.9.1

I hereby declare that the product meets the requirements stated in Directives 2014/35/EU, 2014/30/EU, R&E Directive (1999/5/EC) and conforms to the above mentioned Declarations.

Almeelo, 13-02-2017
Name: M. Velders

8 Ox 104mm
128gflājhiĒEk