 




5RBWS2

Wireless Stereo 900MHz

Speaker System

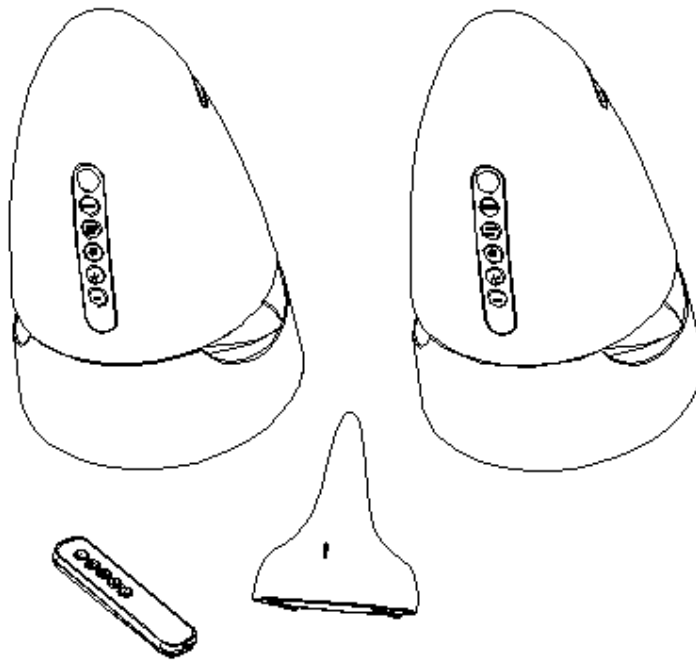

User's Manual

Please read before using the equipment

INTRODUCTION

 
This stereo wireless speaker system applies the latest 900MHz wireless technology that enables you to enjoy music and TV sound anywhere inside or outside your home. You can simply connect the transmitter with any audio source such as Ipod, TV, DVD, Hi-Fi and CD/MP3 player.

FEATURES


1. 900 MHz RF technology
2. Auto Tuning System on speakers
3. Phase Lock Loop (PLL) transmission system on transmitter
4. Waterproof speakers
5. Stereo effect on Speakers
6. Operating distance up to 50 metres
7. No line of sight limitation
8. Auto On/Off control on Transmitter
9. Auto Shut-Off on Speakers
10. Mood light feature
11. Remote control unit

COMPONENT IDENTIFICATION


TRANSMITTER

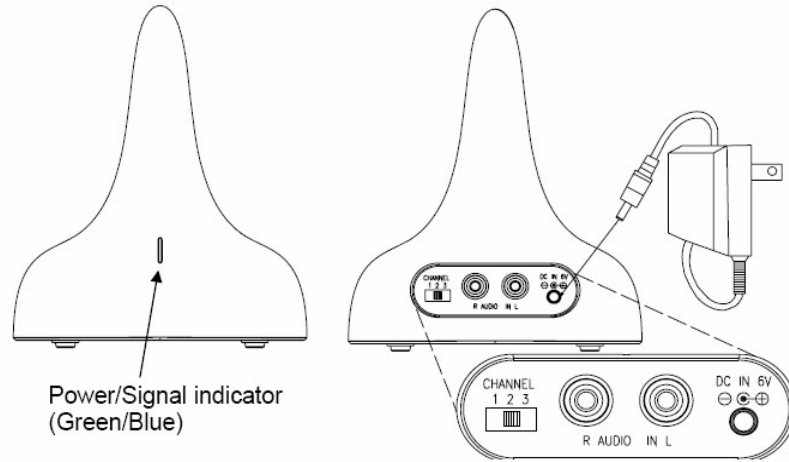

SPEAKER

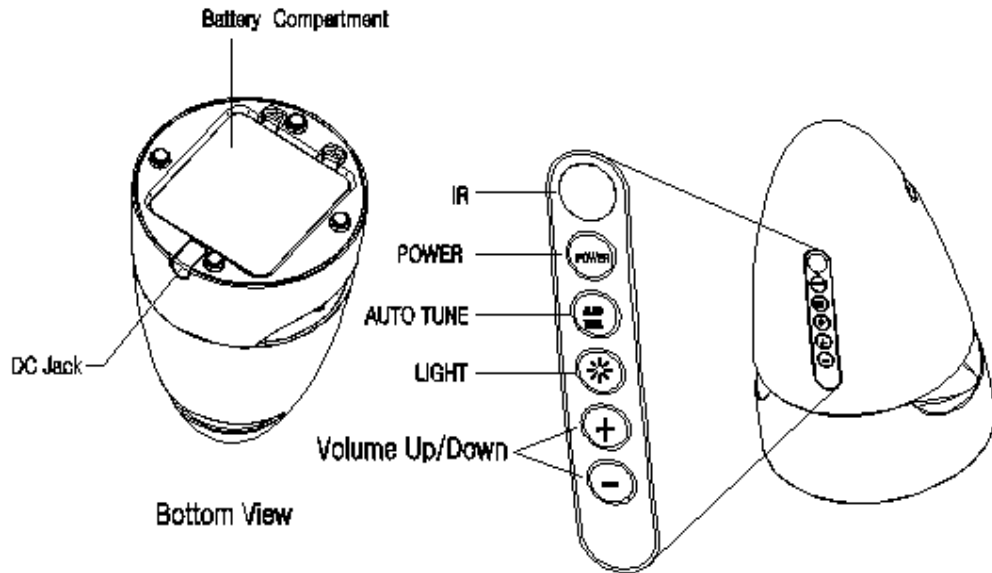 

REMOTE CONTROL UNIT

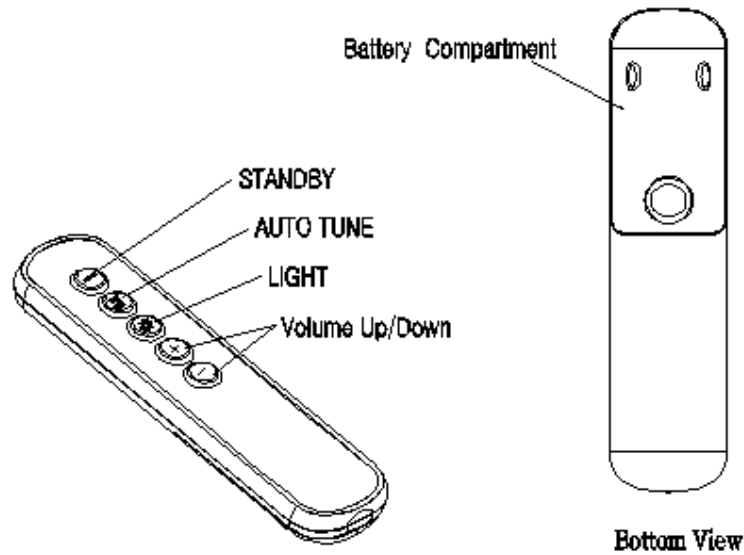 


INSTALLATION

TRANSMITTER


1. Connect the supplied AC power adaptor to an electrical wall outlet.
2. Plug the AC power adaptor in the DC jack located on the rear of the transmitter.
3. The rear of the transmitter has one audio cord that can be connected to the audio output jack of a TV, Ipad, DVD, and CD/MP3 players or to headphone/earphone jack with the connector provided.

 
When the power adaptor connection is finished, the LED on the transmitter will light up in Green. When the audio cable connection is finished and the audio source is turned on, the LED will turn from Green to Blue.

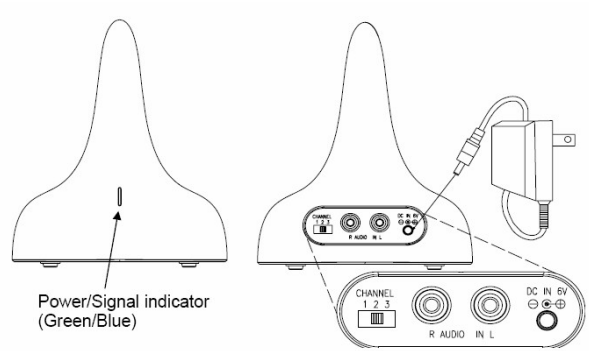

SPEAKERS

  1. Insert 8 'C' size Alkaline batteries into the battery compartment, noting the correct polarity at the bottom of the speakers or connect the 12V power adaptor to the DC input jack on the bottom of each speaker, then plug it to a wall AC outlet.

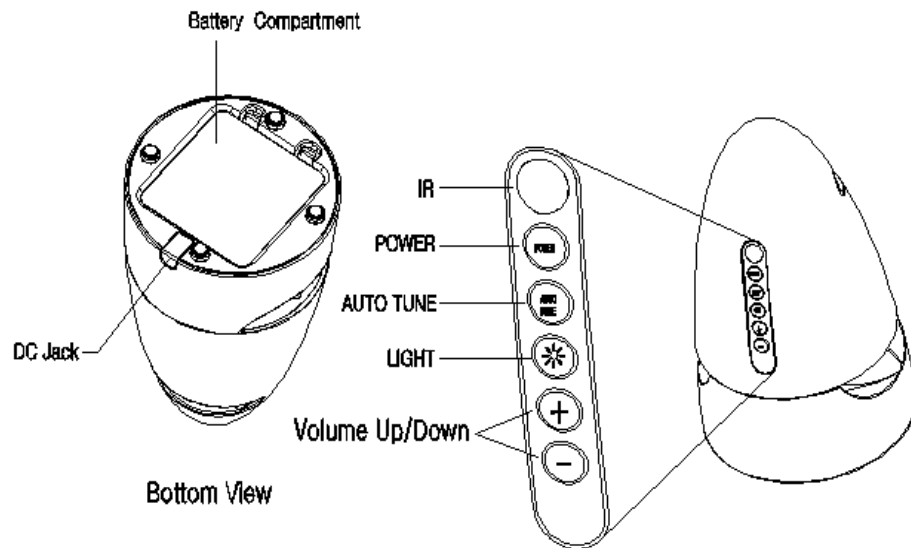

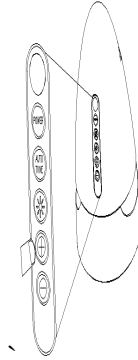

2. Press Power button and turn the speakers on. The Power/Standby LED will light up in Blue.

REMOTE CONTROL UNIT

1. Remove the battery cover at the rear of the remote control unit and insert 2 “AAA” size batteries (included) into the battery compartment, noting the correct polarity.
2. Place the cover back and close the battery compartment.

OPERATION

1. Connect the power adapter between your AC wall socket and the transmitter. The LED will turn to Green.
2. Turn on the audio source (TV or audio component) to which the transmitter is connected. The LED will turn from Green to Blue.
3. Select the channel 1, 2 or 3 of the transmitter depending on noise or interference from nearby 900MHz wireless devices.
4. Turn on the Power button on the speaker and adjust the volume by pressing “+” or “-” for your desired listening level. Volume can also be adjusted by pressing “+” or “-” button located on the remote control unit.
5. Push the “Auto Tune” button to get the best tuning reception in the speakers. When the button is pressed, frequency tuning starts automatically and it stops when a signal is detected.
6. You should now be able to place the speakers freely from room to room without disruption.

SWITCHING OFF

1. If there is no audio input signal to the transmitter for 4 minutes, the transmitter will go to standby mode and LED will change from Blue to Green.
2. If the power adapter is unplugged, the LED on the transmitter will turn off.
3. Speakers will turn to standby mode if there is no input signal to transmitter and LED becomes Green. Speakers will automatically shut off when standby mode continues for 5 minutes.
4. Speakers will also turn to standby mode if you press the POWER button on the remote control to Green LED. Speakers will automatically shut off after 5 minutes.
5. At standby mode, speaker will turn to On automatically after getting a signal from the transmitter.

OTHER CONTROLS

1. Select volume up and down on Speakers or Remote Control Unit.
2. Select Mood Light On/OFF by pressing the "Light" button on Speakers or Remote Control Unit
3. If you hear interference from other components, re-adjust the tuning control by moving channel switch to 1, 2 or 3 of the transmitter, then pressing the "AUTO TUNE" button on speakers or remote unit for best reception.

TROUBLESHOOTING

NO SOUND

- Ensure the AC adaptor is fully inserted into the AC outlet and the power connection input on the transmitter.
- Ensure the speakers are switched ON.
- Speaker's battery capacity is too low, replace with new batteries or connect the AC adaptors to the speakers.
- Ensure the TV or audio component is ON.
- The connected audio / video equipment is not playing. Start playing the equipment.
- The volume of speaker is too low; adjust the volume to an appropriate level.

DISTORTED

- Press the "AUTO TUNE" button on the speakers until it matches the frequency of the transmitter.
- Change the position of the channel selector on the transmitter. You must then press the "AUTO TUNE" button on the speakers.
- Battery capacity is too low. Replace with new batteries.
- Ensure the volume level of speakers is adjusted properly.
- The speaker is too far from transmitter, move closer.
- The input level of the audio signal is too low. Turn up the volume of the audio source equipment.

TECHNICAL SPECIFICATIONS

Transmission Mode	:	UHF stereo
Carrier Frequency	:	900 MHz
Operation Voltage	:	Transmitter, DC 6V 300mA Speaker, 8 X "C" size Alkaline batteries (included) or DC 12V 750mA adaptor Remote Control Unit, 2 X 'AAA' size batteries (included)
Frequency Response	:	40Hz – 12KHz
Distortion	:	1.5%
S/N Ratio	:	65dB (typical)
Channel Separation	:	35dB (typical)
Operating Distance	:	Up to 50 metres (150 feet)
Output Power	:	2 x 5W (Max)

WARNING:

This device complies with AS/NZS CISPR 13:2004 and AS/AZS 22:2006 Australian Standards Tests.

This is a Class A Product

This device may cause radio interference in some situations in which case the user is required to take adequate measures when operating this device



DIGITAL AUDIO



guarantees this product for a period of 12 months from the original date of purchase. This guarantee covers repair or replacement of equipment if it proves to be faulty as a result of manufacturing faults or workmanship. No liability can be accepted for faults arising from accident or misuse.

In the event of a replacement being required and if there is a shortage of stock the supplier has the right to replace the faulty item with a similar product of equivalent value.

Please retain all original packaging materials for possible future use in case the product needs to be returned for repair or replacement. We suggest that you fill in the enclosed Warranty Card and send it in as soon as possible.

CONDITIONS

- This Warranty will be granted only when the original invoice or photo-copy of the sales docket (with proof of date and place of purchase) is presented with the defective product
- This guarantee does not cover transportation costs, home service costs
- Damage from misuse or unauthorized modifications etc.
- Repairs done by unauthorized persons
- Accidents due to accidental dropping, improper ventilation, exposure to excessive heat or incorrect installation

