



LOUDSPEAKERS  
17 DEHAVILLAND CRES  
BALLINA NSW 2478  
TEL (02) 6686 0277  
FAX (02) 6686 0285

# IC-120

## COAX CEILING SPEAKER

### Fitting Instructions

1. Use template to cut hole in wall or ceiling.
2. Carefully pull metal mesh from the front using a hook or a small screwdriver
3. Screw long self-tapping screws into plastic swing arm blocks to make a thread. Whilst doing this, make sure that the block is pressed up close to the speaker front.
4. Adjust screws so that the swing arm is rotated and does not protrude from the sides.
5. Push frame into wall.
6. Screw up firmly the four screws in the speaker front.
7. To make sure the mesh grill does not fall off (particularly if the speaker is ceiling mounted), put the black bitumen compound into the groove that the mesh slides into.

### SPECIFICATIONS

<b>Frequency Response</b>	45Hz - 21kHz + 3db Free Field
<b>Recommended Amplifier Power</b>	10 - 100W Per channel undistorted
<b>Sensitivity Ref 2.83V, 1M</b>	89db
<b>Nominal Impedance</b>	8 ohms
<b>Cross-over Frequencies</b>	5kHz
<b>Tweeter</b>	13mm Dome
<b>Woofers</b>	165mm dual Laminate Cone
<b>Dimensions</b>	225mm Diameter 85mm Deep
<b>Enclosure Finish</b>	White
<b>Weight</b>	1.14kg each