

Welcome

Congratulations on your purchase of the Remote 300 and receiver for Media Center PC with Windows Vista™ Home Premium and Windows Vista™ Ultimate. The infrared (IR) remote control and receiver let you access and manage your Media Center PC and other peripheral devices.

 
✂**Important:** If your Media Center PC has a receiver installed, you can skip the sections in this manual that describe working with the receiver

STEP 1 Insert the Batteries

The remote control uses two AAA batteries, which are included in the package. Whenever you insert the batteries, make sure both of them are new.

To insert the batteries

1. Remove the battery compartment cover by pushing on its release and lifting up.
2. Insert the batteries, making sure to properly orient the positive (+) and negative (–) ends as specified by the battery compartment labels.
3. Replace the battery compartment cover.

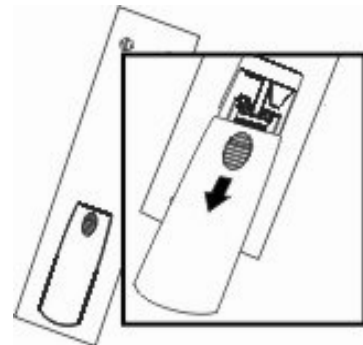

STEP 2 Position the Receiver

For optimum performance, make sure that the distance between the remote control and the receiver doesn't exceed 10 meters. Keep a direct, unobstructed line of sight between the receiver and the remote control, and don't let any natural or artificial light shine directly on the receiver's IR sensor.

 


STEP 3 Connect the Receiver

The receiver relays input from your remote control to your computer.

To connect the receiver

With your computer turned on, plug the rectangular universal serial bus (USB) connector into your computer's USB port.

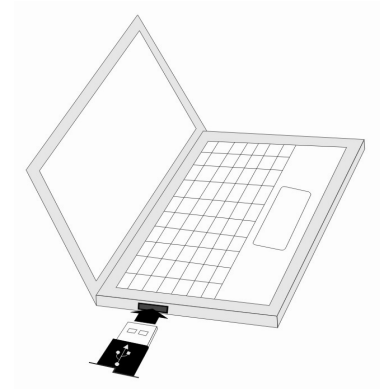

USING THE REMOTE CONTROL









You use the remote control to interact with most of the features in the Media Center. Just point the remote control at the receiver, and then enter your commands.

Your remote control has five types of buttons:

- Navigation buttons, to move between items on the screen. (for example, up arrow or enter)
- Playback buttons, to control your media (for example, pause or stop).
- Audio-visual (AV) and power buttons, to change channels and adjust volume. (for example, channel up or mute)
- Shortcut buttons, to provide a quick way for users to access key media experiences in Windows Media Center.
- Numeric keypad buttons, to enter alphanumeric characters or TV channels.
- **[if available]** Teletext buttons to access Teletext functionality. For more information, see “Teletext Buttons” later in this User Manual.







NAVIGATION BUTTONS



Use the navigation buttons on the remote control to move between items on the screen in Media Center.

Command	Task	Icon
START	Takes the user to the Windows Media Center Start menu	
UP	Moves the pointer up one position	
DOWN	Moves the pointer down one position	
LEFT	Moves the pointer to the left one position	
RIGHT	Moves the pointer to the right one position	
OK	Performs the action at the focus point	
BACK	Moves back one position in the user interface stack	
MORE	Provides information about the pointer	

PLAYBACK BUTTONS












Playback buttons in the Media Center behave just like similar controls on common home electronic devices, such as CD or DVD players. Playback buttons are used to control the playback or display of your media – music, pictures, video, and radio.

Command	Task	Icon
PLAY	Starts playing media at the current position. If playback is paused, pressing this button begins playback from the current position.	
PAUSE	Pauses media playback at the current position	
STOP	Stops playing media at the current position and moves the pointer to the starting point of the digital media file	
RECORD	Record the TV show to disk. If pressed while live TV is on, record the current show. If pressed from the Electronic Programming Guide, records a TV show or TV series to disk (for Windows Media Center computers that include TV tuner hardware).	
FAST FORWARD	Speeds up the time base of the digital media file to the first fast forward value (3X). If a slide show is currently playing, the next picture is displayed when this button is pressed.	
REWIND	Reverses direction of the digital media stream and speeds up the time base to the first rewind value (3X). If a slide show is currently playing, the previous picture is displayed when this button is pressed.	

Command	Task	Icon
SKIP FORWARD	<p>Skips forward one increment when this button is pressed. The meaning of an increment depends on the type of media that is playing:</p> <ul style="list-style-type: none">• If a CD or playlist is playing, the next song is played.• If a DVD is playing, the next chapter is played.• If a slide show is playing, the next picture is displayed.• If a recorded TV show is playing, playback skips ahead 29 seconds.	
SKIP BACK	<p>Skips backward one increment when this button is pressed. The meaning of an increment depends on the type of media that is playing:</p> <ul style="list-style-type: none">• If a CD or playlist is playing, the previous song is played.• If a DVD is playing, the previous chapter is played.• If a slide show is playing, the previous picture is displayed.• If a recorded TV show is playing, playback skips backward 7 seconds.	









AV AND POWER BUTTONS

Use the AV and power buttons to change channels, adjust volume, access a DVD menu, or to put Media Center in standby mode.

Command	Task	Icon
PC POWER (STANDBY)	Puts the Windows Media Center computer into standby mode if the computer is running. If the computer is in standby mode, the computer wakes from standby mode.	PC 
TV POWER	[if available] By default, the TV button has no command assigned to it. This button can “learn” to turn on the TV. For more information, see “Using the Remote Control Learning Functionality”	
VOLUME UP	Increases the current volume by one unit. If the audio is currently muted when this button is pressed, muting is disabled and the volume increases by one unit.	 
VOLUME DOWN	Decreases the current volume by one unit. If the audio is currently muted when this button is pressed, muting is disabled and the volume decreases by one unit.	 
CHANNEL UP	Increases the current channel number by one. If Windows Media Center is in list view when this button is pressed, the pointer moves forward one page in the list.	 
CHANNEL DOWN	Decreases the current channel number by one. If Windows Media Center is in list view when this button is pressed, the pointer moves backward one page in the list.	 
MUTE	Mutes the computer audio	

SHORTCUT BUTTONS [if available]

These buttons provide a quick way for users to access key media experiences in Windows Media Center.

Command	Task	Icon
GUIDE	Displays the Guide in Windows Media Center.	
LIVE TV	Shows live TV on the currently selected channel.	
RECORD TV	Displays the Recorded TV page in Windows Media Center.	
DVD MENU	Displays the DVD menu.	
PC	Change to PC mode	
TV	[if available] Change to TV mode	
AUX	[if available] Change to AUX mode	
AV	[if available] Change to AV mode	

NUMERIC KEYPAD

The numeric keypad consists of numbers from 0 through 9 and two other keys: ENTER and CLEAR. You can use the numeric keypad to type alphanumeric characters anywhere in the Media Center that you can enter text. If you want to delete characters you have typed, press CLEAR; press ENTER to submit the characters you have typed. You can also use the numeric keypad to enter TV channels.

TRIPLE TAP FUNCTION (CHARACTER INPUT)

If you have used an address book in a mobile phone, you are familiar with how to use the numeric keypad to type text. Each time you press a key, you scroll through the characters that are available for that key.

To type text by using the numeric keypad

1. Press a number to scroll through the choices that are available for that key. Each time you press that key, a different character appears. To backspace, press CLEAR.
2. When the character you want is displayed, press ENTER.

TELETEXT BUTTONS [if available]

Media Center supports Teletext when it is available. The colored Fastext buttons on the remote control for Media Center PC work much like the Teletext buttons on a standard Teletext-enabled TV. Additionally, these buttons are used for Integrated Services Digital Broadcasting (ISDB) data functions in addition to Teletext. Teletext buttons should appear below the numeric keypad on the remote control.

To display Page 100 (Teletext home page)

- Press the TELETEXT button. Page 100 will appear in a few seconds and completely replace the TV picture, but it will not affect the TV sound.

To access Teletext pages

- Type the three-digit number of the page you want to display by using the numeric keypad. For example, enter 300 to access the A-Z Teletext Index.

To navigate between Teletext pages

- Press the UP and DOWN buttons on your remote control to navigate between Next and Previous pages.

To use the Fastext buttons

- The red, green, yellow, and blue buttons on your remote control correspond to the same colored buttons on your TV. Press a colored button on your remote control to go to a preset page.

 
How to learn?



※Features:

- Except PC mode, TV, AV, and AUX modes are able to learn.
- The learning remains if the batteries have lost their power.
- The learning end by pressing the DVD menu or if you wait for five seconds.

Instruction

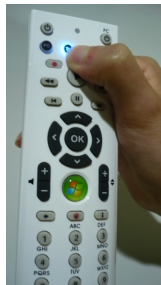1. Press the mode button you want to learn. The mode button will emit a blue light.



2. Hold DVD menu  first, and press OK  . The indicator will emit a green light. Press the button you want to learn. The indicator will blink once.



Indicator



ENGLISH

3. Perform a head to head learning (about a 5cm gap) as shown below. Press the button on the other remote you want to learn for 2 seconds. If you succeed, the indicator will blink a green light twice. If you failed, the indicator will blink a red light four times. Step 3 must be completed within five seconds once you press the button you want to learn.



4. If you want to learn another button, repeat Step 2 and 3.

How to delete old learning?

1. Press a mode button you want to restore (TV, AV or AUX).
2. Hold DVD MENU  first and press LEFT button , the indicator will turn green. Press OK in five seconds to confirm the delete. If you succeed, the indicator will blink a green light twice slowly. If you failed, the indicator will blink a red light four times quickly.
3. The buttons learned in the mode you chose to delete will all be deleted.

Warning:

CAUTION: any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Federal Communications commission (FCC) Requirements, Part 15

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To protect against risk of fire, bodily injury, electric shock or damage to the equipment:

- Do not immerse any part of this product in water or other liquid.
- Do not spray liquid on this product or allow excess liquid to drip inside.
- Do not use this product if it has sustained damage, such as a damaged cord or plug.
- Disconnect this product or remove its batteries before cleaning.