

# LEXIBOOK®



**TM170 / TM171**

**LEXIBOOK®**  
**TouchMan® 170 Series Personal Assistants**  
**TM170 / TM171**

Congratulations on the purchase of your the Lexibook® TM170 series PDA. This new PDA generation include many useful features designed to ease the organisation of your daily schedule and personal information.

With Internet access you can connect to Lexibook's exclusive Internet services site at <https://my.lexibook.com> which provides both useful and interesting information which can be downloaded to your personal computer and then synchronised\* with your TM170.

*\*Some information may not always be able to be synchronised with your TM170.*

Before you start using the TouchMan® 170 Series, you must remove carefully the static label protecting the LCD display and pull out the plastic battery tab at the rear of the unit. After you have done this reset the unit :

1. Insert a blunt pin, such as an opened paper clip, into the **RESET** hole (at the rear of the unit) and press gently. **RESET ?** will displayed on the screen.
2. Press **ENTER** to confirm. Display shows **RESET** during the reset period (just a few seconds).
3. Then the display shows local time screen.

Note : Doing a reset will delete all information stored in the unit as well as the secret code if unit has been used previously.

**Switching the unit on and off.**


Press **ON/OFF** key to switch the unit on or off.  
 TouchMan® TM170 PDA will power-off automatically after 5 minutes if unused.

**Battery replacement**

1. Switch off your unit and pull open battery cover at the rear of the unit.
2. Replace used battery with a new, high quality CR2032 cell with (+) polarity facing up.
3. Display shows **RESET ?**. **Press any key except ENTER to NOT reset the unit and keep your information stored in memory.**

**IMPORTANT !** Be sure to complete battery replacement within 1 minute in order to keep your stored information safe.

**1. Keypad**

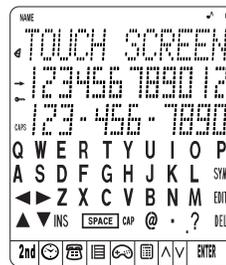


**1.1 Function keys**

- ▲ ▼** : Searching buttons to move cursor to next screen or next option or record.
- ← →** : Moving buttons to move cursor to next line or character.
- ENTER** : Confirm an entry or a selection.
- ON/OFF** : On/Off
- 2nd** : Toggle key to toggle from alphabetical keypad to numerical keypad.
- Home time, World time and Alarm.**
- CONTACTS** : Contacts
- SCHEDULER** : Scheduler mode, Memo mode and To do mode.
- GAMES** : Games
- CALCULATOR** : Calculator, Currency and Euro (fixed rates) conversions, unit conversion.
- PC SYNC** : PC synchronisation with Lexibook SyncMan® 2 software.
- SEARCH** : Search.

### 1.2 Alphabetical keypad

- SYM** : Symbols and special characters (refer to appendix 1 for table list).
- EDIT** : Edit record.
- DEL** : Delete record.
- INS** : Insert space.
- SPACE** : Tap a space
- CAP** : Capital letters

### 2.2 Numerical keypad

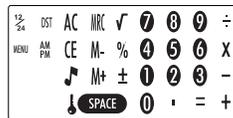

- 12/24** : Toggle from 12-hour format (AM/PM) to 24-hour format (default setting).
- DST** : Enable Daylight Saving Time. When Summer time is on, # is displayed before the day.
- MENU** : Open Menu function list : Language, Date Format, Memory check, PC Sync.
- ✓** : Enable or disable key tone.
- lock** : Enable secret mode.
- AC** : Clear All in Calculator mode.
- CE** : ESC key to cancel operation. Clear entry key in Calculator mode.
- MRC, M-, M+** : Memory keys in Calculator mode.

### 2. User settings

#### Display language

7 languages are available : English, Français (French), Deutsch (German), Español (Spanish), Italiano (Italian), Português (Portuguese) and Nederlands (Dutch).

1. Press **⌘** once to display home time (\* symbol is shown).

2. Press **2nd** key to display numerical keypad then press **MENU LANGUAGE?** option is displayed.
3. Press **ENTER** and use **▲** and **▼** keys to scroll through language list and select desired one.
4. Press **ENTER** to confirm.

#### Date format

1. Press **⌘** once to display home time (\* symbol is shown).
2. Press **2nd** key to display numerical keypad then press **MENU LANGUAGE?** option is displayed.
3. Use **▲** and **▼** to scroll through menu option list and select **DATE FORMAT**. Press **ENTER** to confirm.
4. Use **▲** and **▼** to display available date formats : **YYYY/MM/DD**, **MM/DD/YYYY** and **DD/MM/YYYY**.
5. Press **ENTER** to confirm.

### 3. Time

#### 3.1 Home time

1. Press **⌘** once. City name abbreviation is shown on first line with \* symbol first.
2. Press **EDIT** and use **▲** and **▼** to scroll through city list and select matching time zone.
3. If you wish, you can Tap directly your city name (max. 6 letters) when matching time zone is displayed. Ex : LEEDS.
4. Press **⌘** to move cursor to 2nd line and edit date. Numerical keypad is automatically displayed.
5. Tap current day date then Tap current time. If you are in 12-hour format, press AM/PM to toggle from AM (A) to PM (P) time.
6. Press **ENTER** to confirm.

#### Available Time zones

**PAR** = Paris ; **LON** = London ; **AZO** = Azores Islands ; **RIO** = Rio de Janeiro ;  
**CCS** = Caracas ; **NYC** = New York ; **CHI** = Chicago ; **DEN** = Denver ;  
**LAX** = Los Angeles ; **ANC** = Anchorage ; **HNL** = Honolulu ;  
**MID** = Midway Islands ; **TNG** = Tonga ; **WLD** = Wellington ; **NOU** = Noumea ;  
**SYD** = Sydney ; **ADL** = Adelaide ; **TYO** = Tokyo ; **HKG** = Hong Kong ;

**BKK** = Bangkok ; **RGN** = Yangon ; **DAC** = Dhaka ; **DEL** = New Delhi ;  
**KHI** = Karachi ; **KBL** = Kabul ; **DXB** = Dubai ; **THR** = Tehran ; **MOW** = Moscow ;  
**CAI** = Cairo.

### 3.2 World time

1. Press twice. \* symbol is no longer displayed on first line.
2. Use and keys to scroll through available time zones. Hours and Dates will be automatically set up accordingly.

### 3.3 Alarm setting

Your unit offers three alarm modes :

- Daily alarm : ((●))
- Hourly chime : (((△)))
- Scheduler alarm (event reminder) : (((/)))

1. Press three times. Alarm is displayed.
2. To change alarm time, press **EDIT**.
3. Tap desired time.
4. Press key several time to enable desired alarm modes: hourly chime, alarm clock or event reminder. When an alarm mode is enabled the corresponding LCD icon is shown on the display. You can enable one, two or all three alarm modes.
5. Press to confirm.

### 4. New contact record

There are two contact directories, PERSONAL and BUSINESS.

1. Press once to open **PERSONAL** directory. Press twice to open **BUSINESS** directory.
2. Once directory is opened, tap directly the contact name and then press to go to **ADDRESS** data field.
3. Tap contact address (max. 36 characters) then press key to go to **E-MAIL** data field.
4. Tap contact e-mail address then press key to go to **URL** data field.
5. Tap contact URL then press to move to **TEL./FAX** data field. Numerical keypad is displayed.

6. Tap in first number (on second line) then press key to Tap in second number on third line (max. 36 characters).
7. Press to save record.

### 5. New scheduler record

1. Press once to open **SCHEDULE** mode.
2. Tap the meeting description then press key to enter date. Numerical keypad is displayed.
3. Tap meeting's date and time.
4. Press to save record.

### 6. New ToDo record

1. Press twice to open **TO-DO** mode.
2. Tap task description then press key to set up priority level, between 1 (highest) to 9 (lowest).
3. Tap desired level number then press key to enter due date.
4. Tap due date and time. **P** (pending) is shown before the due date.
5. Press to save record.

#### Mark completed task

1. Display desired ToDo record then press **EDIT**.
2. Press to display PRIORITY.
3. Press to remove **P** letter before due date.
4. Press to save record.

### 7. New memo record

1. Press three times to open **MEMO** mode.
2. Tap in memo description on first line (max. 36 characters).
3. Press to go to second and third lines to enter numbers, if desired.
4. Press to save record.

## 8. Instructions for character input

### Capital letters

Press **CAP**. (alphabetical keypad) to enable or disable capital letters input.

### Figures

Press **2nd** to toggle between alphabetical keypad and numerical keypad, whilst typing.

### Symbols

Press **SYM** (alphabetical keypad) to display first symbol in the list. Press **SYM** repeatedly to scroll through symbol list until desired one is shown.

### Accented letters

Press **SYM** (alphabetical keypad) then desired letter to show its first accent. Tap letter key repeatedly to scroll through all accents.

E.g.: Press **SYM** then **E** to display **é** (lower case mode) or **É** (upper case mode). Refer to appendix 2 to view accented letters.

### Cancel operation without saving data

Press **2nd** to display numerical keypad then press **CE**.

### Correct input

Use **←** and **→** keys to move cursor on desired character to edit then Tap desired character.

### Insert character

Move cursor to desired place and press **INS** (alphabetical keypad) to insert a blank. Tap desired character.

### Delete character

Move cursor on the character to delete and press **DEL** (alphabetical keypad).

## 9. Record searching

Contact records are sorted in ascending alphabetical order using Contact name. Scheduler records are sorted in chronological order.

- Sequential search  
Open desired mode : PERSONAL CONTACTS, BUSINESS CONTACTS, SCHEDULER, TO-DO or MEMO.  
Press **▲** or **▼** to search for desired record.  
If no record is found, display shows NOT FOUND.
- Direct search  
Open desired mode : PERSONAL CONTACTS, BUSINESS CONTACTS, SCHEDULER, TO-DO or MEMO.  
Tap first letters of contact name or description and press **▲** or **▼** keys to display matching records.  
If no record is found, display shows **NOT FOUND**.

## 10. View a record

Once desired record is displayed, press **←** and **→** to scroll left or right. For contact records, press **→** to view other data fields displayed on first line : Names, Address, E-mail, URL.

## 11. Edit a record

1. Once desired record is displayed, press **EDIT** (alphabetical keypad) and use **←** and **→** keys to move cursor to desired place.
2. Insert a character by pressing **INS** key or delete a character by pressing **DEL** key.
3. Press **→** key to move to other data fields to edit or fill.
4. When you have completed editing your record, press **ENTER** to confirm.

## 12. Delete a record

1. Once desired record is displayed, press **DEL** (alphabetical keypad).
2. Display shows **DELETE?**. Press **ENTER** to confirm or any other key to escape deletion.

### 13. Secret mode

You can set up a password to protect your Contact, Scheduler, ToDo and Memo records. Password cannot exceed 6 characters.

**WARNING !** If you forget your password you will not be able to view your data or enter new records and you will be forced to reset the unit. Resetting the unit will lose all your data !

#### Set up a password

1. Press **☰** once to display home time (\* symbol is displayed on first line).
2. Press **2nd** to display numerical keypad and there press **↓**. **PASSWORD ?** is displayed.
3. Tap your password (maximum 6 characters) and press **ENTER**. Press **2nd** to display alphabetical keypad if you wish to Tap letters.
4. Display shows **RE-ENTER !**.
5. Tap again your password and press **ENTER** to confirm. Secret mode is now enabled and **☰** secret icon is on screen.

#### Edit password

1. Press **☰** once to display home time (\* symbol is displayed on first line).
2. Press **↓** (numerical keypad). **PASSWORD ?** is displayed.
3. Tap your current password and press **ENTER**. Display shows **EDIT PSSWD**.
4. Press **ENTER**. Display shows current password and cursor is flashing on first character.
5. Insert character by pressing **INS** or delete character by pressing **DEL** (max. 6 characters). Press **ENTER** to confirm.
6. Display shows **RE-ENTER !**. Tap again new password and press **ENTER**.

#### Open modes when password is enabled

First time you press **☰** or **☰** keys to view or enter data, display will show **PASSWORD?**. Tap your password and press **ENTER** to confirm.

### 14. Calculator

Press **☰** to enter Calculator mode.

### 15. Currency conversion

#### Set up currency conversion

1. Press **☰** twice. First currency conversion is displayed: **EURO → USD**. There are 5 currency conversions.
2. Use **▲** or **▼** keys to scroll through currency conversion list and select desired one.
3. Press **EDIT** (alphabetical keypad).
4. Cursor is flashing on first character of source currency. Change source currency name if needed (max. 4 characters) then press **☰** to go and change target currency name if needed. Press **ENTER** to confirm.
5. If you don't need to change currency names, press **ENTER** straight after pressing **EDIT**.
6. Zero is flashing on third line. Tap currency rate (e.g.: for **EURO → USD**, Tap **1.089** if 1 Euro = 1.089 US\$).
7. Press **ENTER** to confirm.  
Press **CE** at anytime to cancel setting.

#### Perform a conversion

1. Select desired currency conversion. E.g.: **EURO → USD**
2. Tap amount to convert.  
If it is a Euro amount, press **☰** to view US\$ result.  
If it is a US\$ amount, press **☰** to view Euro result.

### 16. Euro Conversion (fixed rates)

Fixed Euro rates are not editable.

#### Perform a conversion

1. Press **☰** three times. First Euro conversion is displayed **EURO → ATS** with its Euro rate **13.7603**. There are 11 Euro conversions.
2. Use **▲** or **▼** arrows to select desired Euro conversion. Ex : **EURO → FRF**
3. Tap amount to convert.  
If it is a Euro amount, press **☰** to view FRF result.  
If it is a FRF amount, press **☰** to view Euro result.

## 17. Unit conversion

### Perform a conversion

1. Press **UNIT** four times. First unit conversion is displayed **inch → cm** with its conversion rate **2.54**. There are 8 pre-stored unit conversions.
2. Press **▲** or **▼** arrows to select desired conversion. Ex : **mile → km**
3. Tap amount to convert.  
If it is a mile amount, press **0** to view km result.  
If it is a km amount, press **0** to view mile result.

### Available unit conversions:

**inch → cm** (inches and centimeters) ; **yard → m** (yards and meters) ;  
**mile → km** (miles and kilometers) ; **C → F** (Celsius and Fahrenheit) ;  
**ft → m** (feet and meters) ; **oz → g** (ounces and grams) ; **lb → kg** (pounds and kilograms) ; **gal → l US** (US gallons and litres) ; **gal → l UK** (UK gallons and litres)

## 18. Reset

This operation will delete all your data and your password.

1. Insert a blunt pin, such as an opened paper clip, in RESET hole at the rear of the unit and press gently. Display shows **RESET?**
2. Press **ENTER** to confirm or any other key to escape.

## 19. Memory check

1. Press **HOME** once to view home time ( \* symbol on first line).
2. Press **2nd** to display numerical keypad and there press **MENU LANGUAGE?** option is displayed.
3. Use **▲** or **▼** arrows to select **MEMORY CHECK** and press **ENTER** to confirm.
4. Display shows how many free bytes are left then returns to home time.

## 20. PC Synchronisation

### Before synchronising

Prior to performing your first synchronisation, make sure that Lexibook® SyncMan®2 software is installed on your PC. Insert the CD included in your

pack. The SyncMan®2 installation menu will start automatically. Follow the screen prompts to install the software.

1. Connect the cable, included with your unit, to a free PC Com Port then insert cable jack into the unit's socket (on top left side)..
2. Start SyncMan® software on your PC and check whether synchronisation mode is set up for TM170 Series Personal Assistants by clicking on **Tools, Options** then **Your Device tab**.
3. Set up PC Com Port in SyncMan®2 by clicking on **Tools, Options** then **Synchronisation tab**. Make sure also that **automatic connection** is ticked off.

### Perform synchronization

1. Once SyncMan® 2 has been started and your unit connected to your PC, press **MENU** then select **PC LINK?** option and press **ENTER**.
2. Display shows **LINKING ...** During synchronization.  
If you have set up a password, you will be required to enter it at this time to perform synchronization.

## 21. Lexibook SyncMan® 2 software

### Required PC configuration

Your PC must have the following configuration to run Lexibook SyncMan® 2 software properly:

- Windows® 98SE (second edition), Windows® ME, Windows® 2000, Windows® XP.
- Microsoft® Internet Explorer® version 5.0 or above.
- 64MB RAM (for Internet Explorer).
- 100MB free space on your hard drive.
- SVGA colour screen.
- One free COM port.

### Installation of SyncMan® 2

1. Close all Windows programs.
2. Insert the SyncMan®2 CD in your CD-ROM drive.
3. The CD-ROM starts up automatically.
4. Follow the instructions on the screen to complete the installation and read SyncMan2® detailed Help Files to fully enjoy all the software features.

### SyncMan® 2 detailed Help Files

1. Make sure that Lexibook SyncMan®2 software is installed on your PC as explained above.

2. Launch SyncMan®2 software.
3. On the left Main Menu choices, click on "Help" (under "Options").
4. The html document " Syncman2 help files " will be displayed in a new browser window.

## 22. GAMES

1. The game of **KEYBOARD WIZ** with 20 levels (from 01 to 20) in prompt speed ( 1 level risen per 12 characters prompted).
2. It can be prompted numbers (0, 1-9) and letters of alphabet (A - Z) at random. An example for explaining the **KEYBOARD WIZ** game.

Key In	Display	Remark
Press  key for entry the <b>KEYBOARD WIZ</b> game	KEYBOARD WIZ 01	*The 1st number flashing
Press the number of level or press  from 01 EX. 0 5	KEYBOARD WIZ 05	
Press  to start the game	START! 05	Display for 2 seconds then prompt the 1st character
If press correct key the word will disappear. If press wrong key and the word won't disappear. EX. Press A1B3659	A1B3654	
And the characters will keep displayed	4LKHG	** After prompt 12 characters the level will rise to level 6 and the prompted speed will faster then level 5

When you lost the game

When the screen is full of 12 characters and you can not catch whole words it means you lost in the game.	AMGJEHRHNFD5	
	GAME OVER!	Prompt for 2 seconds

When you pass the game

When catch whole words of level 20, it means you pass the game.	You Win!	For 2 seconds
The screen turn back to the original and display level 01	KEYBOARD WIZ 01	

## Lottery

1. Press twice. A first series of six lottery numbers (from 1 to 49), picked up at random, is displayed.
2. To view another series of six numbers, press .
3. To view other series, keep pressing .

## 24. CARE AND SAFETY

1. Avoid extremes in temperature, exposure to direct sunlight, water, humidity and dust.
2. Don't drop the Organiser as this may damage it.
3. Do not use detergent, liquid cleaners or solvents to clean unit. Wipe unit with clean, soft dry cloth.
4. Keep unit away from strong magnetic fields (e.g. loudspeakers), and any source static electricity.
5. Don't attempt to dismantle unit. There are no user serviceable parts inside and any attempt to do so will render the warranty void.
6. We strongly recommend that you keep a written record of all important data. In almost any electronic memory system, data can be lost under certain circumstances. We therefore accept no liability for loss of data whether this is caused by incorrect use, repairs, error, changing batteries, using batteries after they have expired or other circumstances. Keep regular backup's of your PC Data.
7. We do not accept any direct or indirect liability for financial losses or claims from third parties, which result from using this product and all its functions, such as stolen credit card numbers, loss or modification of data.

**DO NOT dispose of old batteries by throwing into a fire. They may explode and cause serious injury. ALWAYS dispose of batteries carefully.**  
**DO NOT leave batteries in unit for extended periods of non use as they may leak and cause irrevocable damage to your unit. This will invalidate your warranty.**

**Note:**

- a) Non-rechargeable batteries are not to be recharged.
- b) Different types of batteries or new and used batteries are not to be mixed.
- c) Only batteries to the same or equivalent type as recommended are to be used.
- d) Batteries are to be inserted with the correct polarity.
- e) Exhausted batteries are to be removed from the product.
- f) The supply terminals are not to be short-circuited.

If in doubt consult your local stockist or ring the help line for further information.  
**Warning:** If this product receives an electrostatic shock it may cease to function. To re-start the unit open the battery door (if applicable to this device) and replace it to do a reset, or alternatively remove batteries and put them back in.

**24. WARRANTY**

This product is covered by our 2-year warranty. To make use of the warranty or after-sales service, please contact your retailer and supply proof of purchase. Our warranty covers material or installation-related defects attributable to the manufacturer, with the exception of wear caused by failure to respect the instructions for use or any unauthorised work on the equipment (such as dismantling, exposure to heat or damp etc).

Note: It is recommended that all packaging be kept for future reference. Keep this instruction manual in a safe place as it contains important information. In our constant concern for improvement, the colours and details of the product may differ slightly from those shown on the packaging.

Return/Warranty extension address: **Lexibook UK Limited**  
 Unit 10 Petersfield Industrial Estate  
 Bedford Road, Petersfield  
 Hampshire, GU32 3QA  
 United Kingdom

Web: <http://www.lexibook.com>  
 For assistance, please contact our Freephone Help Line 0808 100 3015.  
 Web site : [www.lexibook.co.uk](http://www.lexibook.co.uk)  
 \* Damage to LCD display not included.

**25. TECHNICAL SPECIFICATIONS**

Battery : 1 x CR2032  
 Dimensions : 105 x 76 x 11.5 mm  
 Weight : 70g  
 Warranty : 2 years  
 Memory size : TM170 = 64KB  
 TM171 = 512KB

Specifications are subject to change without notice.

**Appendix 1 – Symbol table list**

@ | # | \$ | % | & | ' | ( | ) | \* | + | , | - | . | / | : | ; | < | = | > | ? | [ | \ | ] | ^ | \_ | ` | { | | | } | ~ | ¢ | ¢ | ¢

**Appendix 2 – Accented letters**

Press [SYM] [ A/Á ] (CAPS OFF) display	á→à→ã→ä→å→ä→ã→ä→ã
Press [SYM] [ A/Á ] (CAPS ON) display	Á→À→Ã→Ä→Å→Ä→Ã→À
Press [SYM] [ E/É ] (CAPS OFF) display	é→è→ë→ê→ë
Press [SYM] [ E/É ] (CAPS ON) display	É→È→Ë→Ê→Ë
Press [SYM] [ R/R ] (CAPS OFF or ON) display	Ř
Press [SYM] [ Z/Z ] (CAPS OFF or ON) display	ž→Ž
Press [SYM] [ Y/Y ] (CAPS OFF) display	y→ÿ
Press [SYM] [ Y/Y ] (CAPS ON) display	Y
Press [SYM] [ U/Ú ] (CAPS OFF) display	ù→ú→û→ü
Press [SYM] [ U/Ú ] (CAPS ON) display	Ú→Û→Ü→Û
Press [SYM] [ I/I ] (CAPS OFF) display	í→î→ï→ì
Press [SYM] [ I/I ] (CAPS ON) display	Í→Î→Ï→Ì
Press [SYM] [ O/Ó ] (CAPS OFF) display	ø→ó→ô→õ→ö→ö→ö→ö→ö→ö→ö
Press [SYM] [ O/Ó ] (CAPS ON) display	Ø→Ó→Ô→Õ→Ö→Ö→Ö→Ö→Ö→Ö→Ö
Press [SYM] [ S/S ] (CAPS OFF or ON) display	Š→Š
Press [SYM] [ D/D ] (CAPS OFF or ON) display	Đ
Press [SYM] [ N/N ] (CAPS OFF) display	ñ
Press [SYM] [ N/N ] (CAPS ON) display	Ñ→Ñ→Ñ
Press [SYM] [ G/G ] (CAPS OFF or ON) display	Ç
Press [SYM] [ C/C ] (CAPS OFF or ON) display	Č→Č
Press [SYM] [ P/P ] (CAPS ON) display	þ
Press [SYM] [ P/P ] (CAPS OFF) display	þ

### Appendix 3 – Euro fixed rates

Country Code	Currency Name	Country	Euro Rate
FRF	French franc	France	1 Euro = 6.55957 FRF
DEM	German mark	Germany	1 Euro = 1.95583 DEM
IEP	Irish punt	Ireland (Eire)	1 Euro = 0.787564 IEP
ESP	Peseta	Spain	1 Euro = 166.386 ESP
ITL	Lire	Italy	1 Euro = 1936.27 ITL
ATS	Shilling	Austria	1 Euro = 13.7603 ATS
BEF	Belgium franc	Belgium	1 Euro = 40.3399 BEF
FIM	Finland mark	Finland	1 Euro = 5.94573 FIM
LUF	Luxembourg franc	Luxembourg	1 Euro = 40.3399 LUF
NLG	Florin	Pays-Bas	1 Euro = 2.20371 NLG
PTE	Escudos	Portugal	1 Euro = 200.482 PTE

**Warning:** The message "setup error" is displayed when the cable is connected but the personal assistant does not detect the SyncMan®2 software. This can occur in the following cases:

1. The cable is connected to the personal assistant but not to the computer.
2. The cable is connected to the personal assistant and to the computer but the SyncMan®2 software is not launched.
3. The SyncMan®2 software is launched but the COM PORT selected in the SyncMan®2 software is not correct, the organiser selected in the options (Tools/Options/Your Organiser) is not TM170 or the connection mode selected (Tools/Options/Synchronisation) is not "automatic".
4. The COM PORT selected is correct but is setup for use by other software (i.e. standard modem, mouse, scanner, camera, TMSync intended for TM600, etc). In this case it is necessary to change the settings of this software to an alternative COM PORT.