



Technogeek 611 Digital Voice Recorder cum Mp3 Player

Product Manual



Product Features :

- * Voice Recording
- * Play Music : Multiple Music Format.
- * FM Radio
- * E-Book Reading : TXT Format
- * USB 2.0 High Speed Transfer

Name of Parts :

- 1) Screen
- 2) Play / Pause / Selection Button.
- 3) Previous/Fast backward/ VOL- button
- 4) Next/Fast forward/VOL+ button
- 5) "M" Menu Button
- 6) "VOL" : Volume/Return button
- 7) Speaker Hole
- 8) TF card Slot
- 9) USB Port
- 10) Power On / Off Button
- 11) Earphone Port





Technogeek 611 Digital Voice Recorder cum Mp3 Player

Main Features :

- 1) Full zinc alloy case, with loudspeaker
- 2) Support MP3, WMA and all lossless music formats
- 3) Support FM radio and FM radio recording
- 4) Support voice recording, e-book reading
- 5) Support picture, video play(.amv format)
- 6) Support folder switch function
- 7) Support Resume Function
- 8) Lyrics synchronized display
- 9) Stepless variable speed with constant tone
- 10), Multiple EQ mode: Rock, Funk, Hip hop, Jazz, Classical, Electronica, Custom
- 11) Can add songs to your Favorites or Playlist
- 12) Support adding bookmarks to songs or e-book reading
- 15) 4 recording scenes : Normal/train/meeting/long range
- 16) Recording format: MP3, WAV, ACT
- 17) 28 languages optional

Power On / Off :

1. Power On: Slide the power switch to "On" position. If the switch already at "On" position, just press the play button "▶||" for 3 seconds.
 2. Power Off: 1). Slide the power switch to "Off" position.
2). Press play button "▶||" for 3 seconds when the switch at "On" position.
- Note: 1) Please put the power button to "Off" position if you won't use it for a long time.
2) The player will power off automatically if inactive and no applications operate on backstage for 1 min. And it will work on backstage with screensaver if no applications operate for 30 seconds. You can press any button to light up the screen while it working on backstage.

Charging & File Transfer :

Use 5V/300mAh charger for charging.

Plug one end of the micro USB cable into the USB port of a computer, the other end to the port on your device. While it is fully charged, disconnect the cable from your device by pulling it straight outward. Note: when you start charging, it will show two options: "Charge & Transfer" and "Charge & Play" . An icon in the top right corner will show the charging status.





Technogeek 611 Digital Voice Recorder cum Mp3 Player

Main Interface :

Each time you press the button "◀" / "▶" , it will bring you to one of its 6 different functions, including All songs, Artists, Albums, Play lists, Folder view, and Tools. While it's on the main interface, press button "▶" to enter, and then press button "M" to access to the submenu.

Submenu :

While it's on music playing interface, press the button "M" to access to the submenu. Then a related list will show, including "Play mode" . "Sound settings" "Add to playlist" . "Remove from Playlist" , "Sleep timer" , "Delete" and "Bookmarks" .

1. Play mode :

While playing, Press button "M" > "Play mode" > "Play music from..." / "Repeat" / "Shuffle" / "Repeat settings" . Select according to your need. Under menu "Repeat settings" ,you can set "Repeat Mode" (A-B repeat), "Repeat time" and "Repeat interval" .

2. Sound settings :

While playing, Press button "M" > "Sound settings" > "Equalizer" / "Variable Speed Playing" / "Volume limit" . Equalizer, you can choose different music style. such as "Rock" , "Funk" , "Hip hop" , "Jazz" , "Classical" , "Techn" "Custom" .

Rewind/ Forward / Volume :

While it's on music playing interface Hold the button "▶" to fast forward, short press to next music file; hold the button "◀" to rewind, short press to the previous song files. Tap the button "▶" for playing/pause. Hold the button "VOL" to adjust the volume, short press to get back.

- 1) All songs: all songs listed here
- 2) Artists: all songs are classified by artists
- 3) Albums: all songs are classified by albums
- 4) Playlists: all your favorite songs can be added here
- 5) Folder view: all folders can be found here
- 6) Tools: There are four functions: FM radio, E-book, Recordings, Set.

1. **FM radio** : Insert the earphone. then select FM frequency from 87.5 to 108.0MHz. While in the FM radio interface, press button "M" to enter the submenu: Start FM radio recording, Save to preset. Clear preset, Auto tune, Tuner region, FM recording.

2. **E-book**: Can read .txt format E-book file. While reading e-book, press button "M" to enter the submenu: Play setting(Auto scroll time), Delete ebook, Bookmark Select, Delete bookmark, Add book mark, Page select.



Technogeek 611 Digital Voice Recorder cum Mp3 Player

3. Recordings

4 options: Start voice recording. Recordings library. Record format, Record settings
Record format: MP3/WAV/ACT Rec
VOR: set Voice Operated Recording.

4. **Set** : 10 System settings: Play mode, Sound settings, Sleep timer, Display settings, Date and time, Language, Information. Format device, Factory settings, Create playlist.

Note : when you set "date and time" , use button "M" to switch to next one. For example, "Set time" , after you set the hour, press button "M" to switch to set minute.

Treatment of common Problems :

The Machine cannot boot

Please check whether the battery is exhausted. Try again after charging.

- Cannot hear the sound through earphone/ headset

Please check whether the volume is set to zero. Please check whether the headset is properly inserted into the headphone jack.

Serious noise

Please check whether the headset plug is clean. Dirt can cause noise.

Please check whether the music file is damaged. If the music file is damaged, it may cause serious noise or skips. Try to play other music files.

Cannot download files

1) Please make sure the player and computer is connected properly.

2) Please check whether the internal memory space is full.

3) Please check whether the USB cable is damaged.

Specifications :

Music formats : MP3, WMA, DRM WMA, OGG, APE(Normal/Fast),FLAC, WAV, AAC-LC, ACELP

Recording formats : MP3, WMA, ACT

Video formats : AMV

Screen : 1.8" OLED screen

Size : 94*38*9mm, Net weight : 79.2g

Inbuilt Storage Capacity : 8 GB; support up to 32 GB micro SD card(SD card not included)

Case : Full zinc alloy case.

Playing time : 12 hours by earphone ; 3.5 hours by loudspeaker

Charging time : 1.5 hours

Standby time : 520 days

Battery Capacity : 3.7V/260 mAh

Recording distance : 10-15 meters

Lyric format : LRC

Color : Pink/Blue/Black

Reg. Office : 205, 1B, Varun Arcade, Nr. Lawkim Industries, Ghodbunder Road, Thane, Maharashtra - 400610.

Customer Care : 70455 21889 / 70455 31889 Email. : tecgeekindia@gmail.com