

TEK PARTNER

UNIVERSAL REMOTE CONTROL

SPECIFICATIONS	2
SETUP	3
PROGRAMMING	3
POWER SCAN.....	3
ID RECALL.....	4
VOLUME PUNCH THROUGH.....	4
MASTER POWER.....	4
MENU MODE	4
FREQUENTLY ASKED QUESTIONS	5
CARE & MAINTENANCE.....	5
DEVICE CODES.....	6-13
FUNCTION TABLE	14



PRODUCT ID	BW-0561-RD
SERIAL NUMBER	1215
OPERATING SYSTEM	<i>Pre-programmed infrared (IR) remote control</i>
COMPATIBILITY	<i>Replaces most brands of IR remote controls for TVs, VCRs, DVDs, Cable Boxes and Satellite Receivers</i>
POWER REQUIREMENTS	<i>4 AA size batteries (not included)</i>
SIZE	<i>8-1/2" x 5-1/2" x 2-1/2" (LxWxH)</i>

NOTE: The Tek Partner is not compatible with radio frequency (RF) devices.



Your **Tek Partner Universal Remote Control** is a state of the art device that integrates many different infrared (IR) remote controls into one. The Tek Partner is pre-programmed at the factory so all you need to do is follow the instructions in this manual and you will be ready to go! The Tek Partner replaces up to 4 separate remote controls to operate your television (TV), video cassette recorder (VCR), digital video disc (DVD) and cable box or satellite receiver (CBL/SAT). Once programmed, the Tek Partner functions just like your original remote control. Just aim the Tek Partner at your device and press the desired functions. It's that easy! In addition, the Tek Partner has large, soft buttons that illuminate bright red when they are pressed. No other remote control is as user friendly as the Tek Partner.



Bay Products, L.L.C.

5668 Fishhawk Crossing Blvd. #136
Lithia, FL 33547

Tel: (813) 871-0389

Fax: (888) 260-5370

Visit our website at www.bigbuttonremotes.com.

Setup

1. Remove the battery cover from the back of the remote control.
2. Insert 4 new AA batteries. Make sure the polarity of the batteries matches the diagram inside the battery compartment (- matches with - and + matches with +).
3. Push the battery cover back into place.

Programming

Device mode (3 seconds) → digit → digit → digit



1. Make sure you are in front of the device you want to program with the power turned on.
2. Using Programming Codes (see pages 6-13), locate the brand name (manufacturer) of your device. If the brand name of your device is not listed, proceed with Power Scan below.
3. On the remote control, press and hold the applicable device mode button ([TV] [VCR] [DVD] [CBL/SAT]) until the indicator light in the upper left-hand corner begins to blink (approximately 3 seconds).
4. As soon as the indicator light begins to blink, release the device mode button.
5. While the indicator light is still blinking, enter the first 3-digit code listed for your device found in Programming Codes.
6. Test the code by trying different functions, such as PWR. This will determine whether the code entered was the correct code.
7. If only some or none of the functions work, repeat the steps above and try the next code located in Programming Codes. If there are no more codes listed, try Power Scan.

 

NOTE: The device mode button refers to the button at the top of the remote used to program and control your device. All codes are 3 digits, and there may be more than 1 code listed for your device ([TV] [VCR] [DVD] [CBL/SAT]). You must program each device separately. For example, if you have a TV and a cable box, program both the [TV] and the [CBL/SAT] device mode buttons.

Power Scan

Device mode (3 seconds) → PWR → (PLAY) → ENTER (SELECT)

The Power Scan function checks every pre-programmed code in the remote control. Use Power Scan if **your device is not listed in Programming Codes** or **you cannot program the remote control using codes located in Programming Codes.**

1. Make sure you are in front of the device you want to program with the power turned on.
2. On the remote control, press and hold the applicable device mode button ([TV] [VCR] [DVD] [CBL/SAT]) until the indicator light in the upper left-hand corner begins to blink (approximately 3 seconds).
3. As soon as the indicator light begins to blink, release the device mode button.
4. On the remote control, press and release the PWR button.
5. On the remote control, press and release the  (PLAY) button repeatedly. Continue to press and release the  (PLAY) button until the device ([TV] [VCR] [DVD] [CBL/SAT]) powers off.
6. As soon as the device powers off, press and release the ENTER (SELECT) button on the remote control to complete setup.
7. Test the remote control by trying different functions, such as PWR. This will determine whether the correct code was found.
8. If only some or none of the functions work, repeat the steps above.

NOTE: Be patient, as there are dozens of codes for each type of device. Each time you press the  (PLAY) button, the remote control is checking the next code and trying to turn off the device. If you press the  (PLAY) button after the device powers off, the remote control will move to the next code.

ID Recall

Device mode (3 seconds) → MENU/PREV. CH (RECALL)

The ID Recall function will show you the code for the device that you've already programmed.

1. On the remote control, press and hold the applicable device mode button ([TV] [VCR] [DVD] [CBL/SAT]) until the indicator light in the upper left-hand corner begins to blink (approximately 3 seconds).
2. As soon as the indicator light begins to blink, release the device mode button.
3. On the remote control, press and release the MENU/PREV. CH (RECALL) button.
4. As soon as you release the MENU/PREV. CH (RECALL) button, the indicator light in the upper left-hand corner will show you the code for your device by blinking the 100's, 10's and 1's of your code.
5. Count the number of blinks to determine the code. A '0' in any location is represented by a fast flicker.

Example: Code 102 is shown as BLINK <pause> FLICKER <pause> BLINK, BLINK.

Volume Punch Through

Device mode (3 seconds) → Device mode (hold) → TV

The Volume Punch Through function allows you to change the volume on your TV while in CBL/SAT, DVD or VCR mode.

1. Program the remote control to your TV and other media devices.
2. On the remote control, press and hold the applicable device mode button ([CBL/SAT], [VCR], [DVD]) until the indicator light in the upper left-hand corner begins to blink (approximately 3 seconds).
3. As soon as the indicator light begins to blink, release the Device mode button.
4. On the remote control, press and hold the same device mode button again and then also press and hold the [TV] button at the same time.

5. The indicator light will flash several times. Then, release both buttons.

Master Power

Device mode (3 seconds) → PWR → PWR

The Master Power function allows you to turn the power on or off for all programmed devices at the same time.

1. Program the remote control to all of your devices.
2. Power on all of your devices.
3. On the remote control, press and hold the device mode button ([TV] [VCR] [DVD] [CBL/SAT]) until the indicator light in the upper left-hand corner begins to blink (approximately 3 seconds). (Use [CBL/SAT] at Step 3 if you have cable or satellite devices.)
4. As soon as the indicator light begins to blink, release the device mode button.
5. On the remote control, press and release the PWR button.
6. Again, on the remote control, press and release the PWR button.
7. To disable Master Power, repeat the steps above.

Menu Mode

The Menu Mode allows you to use the blue arrow buttons (▲ ▼ ◀ ▶) to navigate a programmed device.

1. Program the remote control to all of your devices.
2. Press and release the MENU/PREV. CH (RECALL) button.
3. In Menu Mode, use arrow buttons (▲ ▼ ◀ ▶) to navigate.
4. Once the desired menu item is reached, press and release the ENTER (SELECT) button to select it.

NOTE: If any button other than ▲ ▼ ◀ ▶ or ENTER (SELECT) is pressed or if no buttons are pressed within 20 seconds, the remote control will exit Menu Mode.

Frequently Asked Questions

? WHY WON'T MY TEK PARTNER WORK?

Make sure you have fresh batteries and that they are installed correctly (see Setup on page 3). If this does not solve the problem, please call (813) 871-0389 for technical support. We are more than happy to help you.

? HOW DO I KNOW WHICH CODE WILL WORK FOR MY DEVICE?

Look up the brand name of your device in Programming Codes (see pages 6-13). Each code is 3 digits. Enter one code at a time and test the remote control after each code is entered until you have one that controls all the functions properly. If you do not find a code to match your brand, proceed to Power Scan (see page 3).

? I WANT MY DEVICES TO COME ON ALL AT THE SAME TIME. WHAT DO I DO?

Program each of your devices separately and make sure they are all functioning properly. Once they are all programmed, power on all devices. Hold down the applicable device button (TV, VCR, DVD or CBL/SAT) until the indicator light starts to blink, release the device button and press and release the PWR button twice. If you have a cable or satellite device, use the CBL/SAT button. Master Power should now be enabled. To disable Master Power just repeat the process again (see Master Power on page 4).

? I USED THE POWER SCAN OPTION TO FIND A CODE FOR MY DEVICE. HOW DO I KNOW WHAT THE CODE IS?

Please follow the instructions on pages 3-4 for ID Recall.

? I CANNOT GET MY VOLUME TO WORK ON MY SATELLITE RECEIVER OR CABLE BOX. WHAT SHOULD I DO?

You need to set up Volume Punch Through. See the instructions on page 4.

Care & Maintenance

Do not expose the remote control to direct sunlight, extreme high or low temperatures, liquids or mechanical shock.

Do not mix old and new batteries as old batteries have a tendency to leak.

Do not use corrosive or abrasive cleaners on the remote control.

Do not disassemble the remote control as it contains no user serviceable parts.

To keep the remote control clean, periodically wipe it with a dry, soft cloth.

PROGRAMMING CODES

2 WIRE	CABLE	060
ABC	CABLE	001, 003, 045, 048, 052, 059, 130
ACER	TV	131
ADB	CABLE	089, 129
ADMIRAL	TV	069, 192
ADVENT	TV	159, 241
AIWA	TV	126
	VCR	040
AKAI	TV	001, 006, 014, 020, 042, 052, 098, 160, 216
	VCR	022, 048, 050, 109
AKURA	TV	361, 362, 363, 364
ALBA	DVD	084
	TV	401
ALLEGRO	CABLE	111
ALTHASTAR DSR	SATELLITE	422
AMERICAST	CABLE	212
AMINO	CABLE	067, 107
AMPRO	VCR	076
	TV	070
AMSTRAD	VCR	133
AMW	DVD	083
ANAM	VCR	037, 039, 089
	TV	045, 055, 057, 076, 095, 106, 109, 112
ANTRONIX	CABLE	021
AOC	TV	001, 132, 135
APEX	TV	164, 216, 365
APEX DIGITAL	DVD	056, 216, 233, 239
ARCHER	CABLE	012, 014, 021, 031, 122
ARRIS	CABLE	078, 084, 106, 145
ASA	VCR	134
AUDIO DYNAMICS	VCR	018, 029, 044, 048
AUDIOVOX	TV	087, 165
AVOL	TV	392, 393
AWA	TV	359, 384
BELCOR	CABLE	113
BELL (brand, not provider)	CABLE	091
BELL&HOWELL	TV	069

BENQ	TV	309, 310
BLAUPUNKT	TV	304
BLU:SENS	TV	166, 169, 171
BROKSONIC	TV	091, 255
	VCR	005, 041, 043, 110, 166
BUSH	TV	329
CABLE ONE (brand, not provider)	CABLE	105
CABLE STAR	CABLE	033, 113
CALIFORNIA AUDIO	DVD	176
CANAL	SATELLITE	399
CANAL+	SATELLITE	399
CANDLE	TV	001, 002, 003
	VCR	134
CANON	VCR	037, 039, 140
CAPEHART	VCR	094
CENTURION	CABLE	092
	TV	038, 170
CENTURY	CABLE	014
CETRONIC	TV	045
CHANGHONG	TV	216
CHANNEL MASTER	SATELLITE	317, 320, 321, 361
	CABLE	009
CHAPARRAL	SATELLITE	315, 316, 451
CISCO	CABLE	018, 051, 060, 078, 125, 128, 154, 251
	CABLE	014, 111
	TV	001, 002, 003, 045, 092
CITIZEN	TV	001, 002, 003, 045, 092
	VCR	134
CLASSIC	TV	045
COBY	DVD	042, 048
	TV	311
COLOUR VOICE	CABLE	090
COMCAST (brand, not provider)	CABLE	026, 032
COMTRONICS	CABLE	037
CONTEC	CABLE	228
	TV	045
CORANDO	TV	172
CRAIG	TV	045, 055, 157, 396
	VCR	003, 116
CROWN	TV	045

CURTIS MATHES	TV	001, 092, 123, 128
	VCR	037, 039
	DVD	087, 088, 089, 090, 091, 092, 093
CXC	TV	045
CYBERHOME	DVD	001
DAEWOO	DVD	246
	TV	022, 023, 045, 046, 056, 068, 102, 108, 111, 114, 116, 118, 119, 127
	VCR	012, 014, 094, 096, 098, 102
DAYTRON	VCR	094
DBX	VCR	018, 029, 044, 048
DELL	TV	330
DENON	DVD	150, 162, 201, 208
DGM (DIGIMATE)	TV	360
DIAMOND	CABLE	030
DIBOSS	TV	174
DIGI	CABLE	114
DIRECTV	DVD	312, 360
	SATELLITE	312, 360, 401, 411
DISH NETWORK (SEE ALSO ECHOSTAR)	TV	176
	SATELLITE	400, 401
DOLBY (SEE ALSO PACE)	CABLE	029, 078
DRAKE	SATELLITE	317, 318, 413
DUAL	VCR	136
DVD-VIDEO	DVD	231
DX ANTENNA	SATELLITE	331, 352, 369
DYNASTY	TV	045
DYNATECH	TV	063
	VCR	040, 057
DYNEX	DVD	041
	TV	083, 129, 185, 312
EAGLE	CABLE	027, 037, 046, 186
EASTERN	CABLE	063, 066, 070, 115
ECHOSTAL	SATELLITE	475

ECHOSTAR (SEE ALSO DISH NETWORK)	CABLE	011
	SATELLITE	066, 309, 319, 322, 380, 395, 396, 400, 401, 406, 410, 416, 463, 467, 475, 477, 483, 484, 490, 493
ELECTRICORD	CABLE	039
ELECTROGRAPH	TV	187
ELECTROHOME	SATELLITE	392
	TV	167
	VCR	063
ELEMENT	TV	313, 335
EMERSON	CABLE	112, 229
	DVD	007
	TV	001, 029, 033, 045, 048, 049, 091, 094, 139, 141, 155, 157, 162, 214, 229, 314, 315
	VCR	033, 037, 040, 041, 042, 043, 050, 110, 112, 171, 182, 183, 184, 191, 193, 195
ENTONE	CABLE	126
ENVISION	TV	001
EPSON	TV	188
EVOLUTION	CABLE	104, 121
FERGUSON	VCR	136
FINLUX	VCR	133
FISHER	TV	058
	VCR	003, 016, 142
FLUID	TV	335
FOXTEL	CABLE	038
	SATELLITE	397
FUJITSU	SATELLITE	334
	TV	331, 332, 333
FUNAI	DVD	025, 067, 068, 094
	TV	033, 045, 193
	VCR	036, 040, 064, 133
FUTURETECH	TV	045
G.I	CABLE	001, 003, 015, 017, 096, 097, 141
GATEWAY	TV	017, 195, 196

PROGRAMMING CODES

GC ELETRONICS	CABLE	113
GENERAL ELECTRIC (GE)	CABLE	009,076
	DVD	196,197
	SATELLITE	474
	TV	001,015,021,057,070,121,133,141,145,163,199
	VCR	037,039,067,076,093,095,124,127
GEMINI	CABLE	015
GENERAL	CABLE	210
GENERAL INSTRUMENT	CABLE	032,226,227
	SATELLITE	301,303,311,323,365,403,454,468
GO VIDEO	DVD	002
	TV	075,339,381,382
	VCR	113,117
GOLD STAR	CABLE	224
GOLDEN CHANNEL	CABLE	037
GOLDSTAR (LG)	VCR	011,018,092,100,107
	TV	043,066,067,101,104,105,110,113,118
GOODMANS	TV	368,369,370,371,372
GOODMIND	CABLE	112
GPX	TV	346,367
GRADIENTE	DVD	228,229
	TV	238
GRAETZ	VCR	136
GRUNDIG	SATELLITE	393
	TV	334,345,349,350,351,352,353,354,355,356,357,358,359,360,385
GVA	DVD	097
	TV	316,406
HAIER	TV	092,197,317
HAMLIN	CABLE	055,056,061,099,100,101,117,152,175,207,208
HANSPREE	TV	399,400

HARMAN KARDON	DVD	148,149,186,220
	TV	201
	VCR	018,049
HISENSE	TV	148,200,318,319,395
HITACHI	CABLE	001,061
	DVD	193
	SATELLITE	372
	TV	001,015,016,018,029,072,147,204,207,226
	VCR	011,040,048,067
HITACHI DBS	SATELLITE	455
HOMEWORX	CABLE	120
HOSPITALITY	CABLE	074,080
HOUSTON TRACKER	SATELLITE	463,467
HP	TV	203,336
HUAWEI	CABLE	094,095,102
HUGHES	SATELLITE	306,314,385,455,480,485,488
HUMAX	SATELLITE	388
	TV	337
HY-TEK	TV	093
HYUNDAI	TV	115,208
ILO	TV	082,103
INFINITY	TV	247
INKEL	TV	120
INSIGNIA	DVD	029,033,045
	TV	050,152,312
INSTANTREPLAY	VCR	037,039
ITT	VCR	136
JANIEL	SATELLITE	366
JASCO	CABLE	111
JBL	TV	247
JCL	VCR	037,039
JCPENNY	TV	001,015,035,092,145
	VCR	011,018,039
JENSEN	TV	019
	VCR	048

JVC	DVD	085,086,192,199
	TV	040,042,079,251,402,403
	VCR	018,037,039,048,052,054,059,062,068,111,132
KAWASHO	TV	173
KCPI	SATELLITE	408
KEC	TV	045
KENWOOD	DVD	151,183,225
	TV	001
	VCR	020,044,048,052
KLEGG	TV	209
KLH	DVD	224
	TV	075
KLOSS	TV	002,060
KNOLL SYSTEMS	TV	338
KONKA	TV	339
KTV	TV	001,045,162,248
LEGEND	SATELLITE	453
LG	DVD	046,198,211,219,226
LG (GOLDSTAR)	TV	043,066,067,101,104,105,110,113,118
LLOYD	VCR	040
LLOYTRON	TV	172,173
LODGENET	TV	069
LOEWE	TV	211,247
LOGIK	TV	069
LOTTE	DVD	152
LXI	TV	145,247
	VCR	011,020,040
M7	SATELLITE	414
MACOM	CABLE	040,191
	SATELLITE	317,365,370,371
MAGNASONIC	TV	089
MAGNAVOX	CABLE	017,019,068,082
	DVD	007,017,024,028,031,051,057,169,212,234
	SATELLITE	473
	TV	001,003,005,009,010,030,041,059,060,061,064,065,118,122,145,210,225,247,259,321
	VCR	007,008,035,036,037,039,040,072

MAJESTIC	TV	069
MARANTZ	DVD	169,214
	TV	001,167,247
	VCR	018,037,039,073
MATSUI	VCR	033
MAXENT	TV	196
MEI	VCR	037,039
MEMOREX	CABLE	058
	SATELLITE	453
	TV	053,069
	VCR	003,020,037,039,040,057,076,115
MGA	TV	001,033,167
	VCR	049,050,063
MIDLAND	TV	199
MINOLTA	VCR	011
MINTEK	DVD	060
	TV	213
MISAKI	TV	193
MITSUBISHI	DVD	172,202
	SATELLITE	372
	TV	001,011,033,039,100,154,160,167,168
	VCR	011,026,032,049,050,055,063,065,131,145,146
MOTOROLA	CABLE	004,005,006,043,049,060,064,069,077,215,216,226
	SATELLITE	402,464
	TV	237
	VCR	196,197
MOVIE TIME	CABLE	039
MTC	TV	001
	VCR	133
MULTITECH	VCR	030,040

PROGRAMMING CODES

NAD	DVD	217
	TV	031
	VCR	139
NATIONAL	TV	177, 178, 179, 180, 181, 182
	VCR	140
NEC	TV	001, 022, 025, 042, 057, 084, 121, 125
	VCR	018, 029, 044, 048, 052
NEXTWAVE	SATELLITE	423
NIKEI	TV	045
NORDMENDE	VCR	048
NORSAT	SATELLITE	374
NSC	CABLE	044, 075, 190
OAK	CABLE	023, 043, 059, 196, 197, 223
OLEVIA	TV	077
ONKING	TV	045
ONKYO	DVD	200, 207
ONWA	TV	045
OPPO	DVD	052
OPTIMUS	DVD	153, 183
	SATELLITE	466
	TV	031
	VCR	057
OPTOMA	TV	218
OPTONICA	VCR	057
	TV	025
ORION	VCR	005, 166
	TV	091, 219
PAC DSS	SATELLITE	478
PACE	CABLE	029, 060, 078, 079, 083, 084, 086, 087, 088, 118, 226, 486
	SATELLITE	328, 329, 336, 337, 338, 340, 342, 343, 344, 345, 346, 347, 356, 357, 363, 386
PACIFIC	DVD	018
PALSONIC	TV	374, 375, 377, 378

PANASONIC	CABLE	050, 053, 155, 176, 177, 189, 214, 225
	DVD	044, 070, 071, 072, 073, 074, 075, 078, 163, 171, 179, 181, 184, 189, 203, 205, 238, 240, 243
	SATELLITE	366, 469
	TV	008, 051, 057, 076, 149, 247, 248, 249, 250, 252, 328, 394
PANASONIC DBS	VCR	017, 024, 037, 078, 150, 167, 173, 176, 188, 189, 201, 203
	SATELLITE	457
PANTHER	CABLE	114
PARAGON	CABLE	058
PENNEY	TV	199
PENTAX	VCR	011, 026, 037, 039, 067
PHILCO	TV	001, 003, 045, 057, 060, 061, 064, 065, 118
	VCR	037, 039, 040
PHILIPS	CABLE	013, 019, 020, 027, 085, 090
	DVD	005, 058, 077, 081, 169, 188, 212
	SATELLITE	305, 375, 415, 480, 485, 487, 488, 492, 494
	TV	001, 003, 040, 060, 088, 130, 145, 231, 232, 233, 234, 235, 236, 247
	VCR	037, 039, 040, 046, 075
PIONEER	CABLE	001, 041, 057, 119, 147, 148, 171, 209, 217, 219, 224
	DVD	154, 160, 174, 180, 221, 222
	TV	001, 024, 029, 031, 032
	VCR	011, 018, 027, 052

POLAROID	DVD	023
	TV	071, 073, 074, 075, 078
PORTLAND	TV	220
	VCR	094
POST NEWS WEEK	CABLE	023
PREMIERE	SATELLITE	376
PRESIDENT	SATELLITE	381, 404
PRIMESTAR	CABLE	162
	SATELLITE	412, 454, 464
PROCEED	DVD	215
PROSCAN	DVD	053, 173, 195, 196, 197
	TV	133, 195, 324, 379, 380, 405
	VCR	121
PROTON	TV	081
PTS	CABLE	018, 054, 075, 076
PULSAR	CABLE	058
	VCR	076
QUARTZ	VCR	002, 020
QUASAR	CABLE	058
	TV	034, 057, 227, 232, 248
	VCR	039, 167
QUEST	CABLE	035
RADIO SHACK	CABLE	111, 112, 213
	TV	025, 043, 045, 048, 118, 163, 198
	VCR	003, 020, 057, 093, 133, 134, 140, 142, 160, 167
RCA	CABLE	053, 214
	DVD	159, 173, 196, 197, 232
	TV	001, 007, 029, 057, 130, 133, 145, 155, 161, 163, 176, 199, 205, 206, 222, 322
	VCR	006, 011, 026, 039, 066, 067, 093, 095, 124, 127
	SATELLITE	307, 308, 310, 379, 465, 474, 481, 482, 491

RCA DSS	SATELLITE	458, 476
REALISTIC	CABLE	012
	SATELLITE	325, 349, 377
	TV	025, 043, 045, 048, 163
	VCR	003, 020, 037, 039, 040, 057, 093, 142, 160
REGAL	CABLE	055, 056, 061, 099, 100, 101, 158, 207
REGENCY	CABLE	063, 115
RUNCO	DVD	165
	TV	186, 223
	CABLE	058
SAA	TV	183
SABA	VCR	136
SALORA	VCR	020
SAMPO	TV	001
	CABLE	008, 018, 037, 072, 093, 146, 186, 224, 226
	DVD	002, 003, 016, 021, 025, 043, 050, 062, 063, 064, 065, 066, 168, 195, 209, 210, 241, 244, 245
	SATELLITE	313, 359, 362, 368, 373, 422, 489
	TV	001, 044, 085, 092, 096, 104, 118, 124, 134, 136, 145, 156, 397
SAMSUNG	VCR	009, 028, 038, 093, 095, 098, 106, 109, 207
SANSUI	DVD	098, 227
	TV	042, 050, 091, 408
	VCR	005, 048, 052, 116, 166
SANYO	DVD	004, 022, 051, 155, 156, 182
	TV	026, 037, 038, 054, 058, 137, 238
	VCR	003, 014, 020, 036, 115

PROGRAMMING CODES

PROGRAMMING CODES

SATELLITE SERVICE CO	SATELLITE	331, 335, 341, 353
SCEPTRE	TV	224, 366
SCHAUB LORENZ	VCR	136
SCIENTIFIC ATLANTA	CABLE	003, 004, 018, 022, 047, 048, 052, 079, 130, 145, 159, 160, 183, 203, 204
	SATELLITE	339
SCOTT	TV	033, 045, 049
	VCR	043, 098, 110, 112
SEARS	TV	033, 035, 058, 092, 145
	VCR	003, 011, 016 020, 026, 037, 142
SEIKI	TV	335
SELECO	TV	340
SHARP	DVD	036, 037, 047, 079, 161, 166, 183, 204, 230
	TV	025, 028, 033, 047, 138, 154, 253, 403
	VCR	010, 019, 037, 156, 196, 205
SHERWOOD	TV	228
SHINTOM	VCR	030
SIGNAL	CABLE	037
SIGNATURE	CABLE	001
	TV	069
SKY	SATELLITE	363, 364
SL MARX	CABLE	037
SOLE	TV	229, 341
SONIQ	TV	320
SONY	CABLE	098, 229, 231
	DVD	013, 019, 038, 054, 055, 082, 156, 167, 178, 187, 191, 206, 223, 232, 242
	SATELLITE	304, 405, 407, 486
	TV	004, 012, 117, 140, 194, 230, 245
	VCR	003, 015, 016, 021, 031, 037, 053, 056, 060, 061, 082, 187, 196, 199, 202

SOUNDESIGN	TV	003, 033, 045
	VCR	040
SPRUCER	CABLE	053, 081, 177, 189
SSS	TV	045
STAR CHOICE DBS	SATELLITE	459
STARCOM	CABLE	002, 015, 016, 141, 163
STARGATE	CABLE	015, 037
STS	VCR	011
SUPER GUIDE	SATELLITE	327, 423
SUPERSCAN	TV	193
SUPRE MACY	TV	002
SVA	TV	386, 387, 388, 389, 390, 391
	CABLE	071
SYLVANIA	DVD	006, 020, 032, 034, 235
	TV	001, 003, 009, 027, 060, 061, 064, 065, 107, 118, 142, 145, 146, 150, 153, 240, 247, 254, 323
	VCR	001, 037, 039, 040, 063, 200, 208
SYMPHONIC	DVD	027
	TV	184, 193, 324
	VCR	040
SYNTAX OLEVIA	TV	077
TADIRAN	CABLE	037
TANDY	CABLE	024
	VCR	040
TASHICO	VCR	134
TATUNG	VCR	044, 048
	TV	057, 063
TCL	TV	243
TEAC	DVD	099
	TV	143, 325, 409
	VCR	040, 044, 048
TECHNICOLOR	CABLE	109, 110, 116
TECHNICS	DVD	164
	TV	080
	VCR	037, 039
TECHNIKA	TV	001, 002, 003, 033, 036, 045, 069, 092, 167, 304, 383

TEECOM	SATELLITE	330, 333, 390, 391, 409
TEKNIKA	VCR	037, 039, 040
TELECAPATION	CABLE	028
TELEFUNKEN	TV	047
	VCR	136
TELERENT	TV	069
TEXSCAN	CABLE	036, 071
THOMAS	VCR	040
THOMSON	CABLE	077
	DVD	196, 197
	TV	190, 191
	VCR	136
THORN	VCR	136
TIMELESS	CABLE	123
TIVO	CABLE	118
	DVD	008, 009, 010, 011, 014, 015
TOCOM	CABLE	045, 046, 062, 170, 205
TOPFIELD	SATELLITE	378
	CABLE	108
TOSHIBA	CABLE	058
	DVD	026, 035, 039, 040, 049, 061, 076, 080, 169, 181, 185, 190, 200, 213, 227, 236
	SATELLITE	302, 426, 462, 470, 473
	TV	013, 035, 042, 063, 092, 144, 158, 202, 246
	VCR	011, 013, 023, 025, 034, 045, 051, 063, 085, 098, 112, 142, 169, 174, 185, 198
TRUTECH	DVD	030
	TV	099
UEC	SATELLITE	358
UNIDEN	SATELLITE	323, 324, 325, 326, 332, 348, 349, 350, 351, 354, 355, 381, 382, 383, 389, 403, 466
UNIKA	CABLE	014, 021, 031
UNITED CABLE	CABLE	059

UNIVERSAL	CABLE	012, 014, 021, 031, 033, 034, 039, 042, 113
	TV	015
UPSTART	TV	407
VECTOR RESEARCH	VCR	018
VENTURER	CABLE	010
VIASAT	SATELLITE	398
VICTOR	VCR	052
VIDEO CONCEPTS	TV	160
	VCR	018, 040, 050
VIDEOWAY	CABLE	124
VIDIKRON	TV	244, 342
VIEWSONIC	TV	086, 301, 343, 344
VIEWSTAR	CABLE	019, 025, 190
VIORE	TV	302, 326
VITO	TV	303
VIZIO	TV	062, 066, 097, 231, 323, 327
WARDS	TV	015, 025, 033, 061, 064, 065, 069, 247
	VCR	003, 011, 030, 037, 039, 040, 057, 058, 112
WHITE WESTINGHOUSE	TV	006, 151, 347, 348
WINBOOK	TV	305
XFINITY (brand, not provider)	CABLE	077, 078, 103
YAMAHA	DVD	157, 158, 205, 218
	TV	001, 306, 307
	VCR	018, 040, 044, 048
YUPITERU	TV	045
ZENITH	CABLE	058, 065, 098, 212, 222
	DVD	169, 194, 198, 211, 219
	SATELLITE	371, 384, 387, 394, 419, 479
	TV	069, 070, 090, 308
	VCR	005, 040, 052, 060, 076
ZENITH DIVX	DVD	175
ZTE	CABLE	127

Function Table

Button Name	TV	VCR	DVD	CBL/SAT
ON/OFF	ON/OFF	ON/OFF	ON/OFF	ON/OFF
TV	TV MODE	TV MODE	TV MODE	TV MODE
VCR	VCR MODE	VCR MODE	VCR MODE	VCR MODE
CBL (SAT)	CBL/SAT MODE	CBL/SAT MODE	CBL/SAT MODE	CBL/SAT MODE
DVD	DVD MODE	DVD MODE	DVD MODE	DVD MODE
MUTE (INFO/ VIEW)	MUTE	MUTE	INFO/VIEW	MUTE
PREV (RECALL)	LAST CHANNEL/ RECALL	OPEN/CLOSE	OPEN/CLOSE	LAST CHANNEL/ RECALL
MENU	MENU	MENU		MENU
CH +	CHANNEL UP	CHANNEL UP	CHANNEL UP	SKIP +
CH -	CHANNEL DOWN	CHANNEL DOWN	CHANNEL DOWN	SKIP -
VOL +	VOLUME UP	VOLUME UP	VOLUME UP	VOLUME UP
VOL -	VOLUME DOWN	VOLUME DOWN	VOLUME DOWN	VOLUME DOWN
0 - 9	0 - 9	0 - 9	0 - 9	0 - 9
TV/VCR (TV/SAT)	TV/VCR	TV/VCR	TV/SAT	TV/DVD
ENTER (SELECT)	ENTER	ENTER	SELECT/ENTER	ENTER
STOP (EXIT)	STOP (VCR)	STOP	EXIT	STOP/EXIT
PLAY (▶)	PLAY (VCR)	PLAY	UP	PLAY
PAUSE (⏸)	PAUSE (VCR)	PAUSE	GUIDE	PAUSE
REW (◀)	REWIND (VCR)	REWIND	LEFT	REWIND
FF (▶▶)	FAST FORWARD (VCR)	FAST FORWARD	DOWN	FAST FORWARD
REC (⏺)	RECORD (VCR)	RECORD	RIGHT	RECORD