

PHASER® 1235
NETWORK COLOR PRINTER
Service Quick Reference Guide

Warning

The following servicing instructions are for use by qualified service personnel only. To avoid personal injury, do not perform any servicing other than that contained in operating instructions unless you are qualified to do so.

This printing: December 2000
071-0728-00

Tektronix
COLOR PRINTERS BY
XEROX

Copyright © Xerox Corporation. Unpublished rights reserved under the copyright laws of the United States. Contents of this publication may not be reproduced in any form without permission of Xerox Corporation. Phaser[®], PhaserShare[®], ColorStix[®], the TekColor[®] icon, Made For Each Other[®], DocuPrint[®], WorkSet[®], Ethernet[®], the stylized X, and XEROX[®] are registered trademarks of Xerox Corporation. PhaserLink[™], PhaserPort[™], PhaserPrint[™], PhaserSym[™], PhaserTools[™], InfoSMART[™], and the TekColor[™] name are trademarks of Xerox Corporation. TekColor CareSM and RealSUPPORTSM are service marks of Xerox Corporation.

FTP[®] Software is a registered trademark of FTP Software, Incorporated. PCL[®] and HP-GL[®] are registered trademarks of Hewlett-Packard Corporation. Novell[®] and NetWare[®] are registered trademarks of Novell, Incorporated. Sun[®], Sun Microsystems[®], and Sun Microsystems Computer Corporation[®] are registered trademarks of Sun Microsystems, Incorporated. Other marks are trademarks or registered trademarks of the companies with which they are associated.

All trademarks noted herein are either the property of Xerox Corporation, Pantone, Inc., or their respective companies.

© Pantone, Inc., 1988.

Users safety summary

Terms in manual:	CAUTION	Conditions that can result in damage to the product.
	WARNING	Conditions that can result in personal injury or loss of life.

Power source: For 110 VAC printers, Do not apply more than 140 volts RMS between the supply conductors or between either supply conductor and ground. Use only the specified power cord and connector. For 220 VAC printers, do not apply more than 260 volts RMS between the supply conductors or between either supply conductor and ground. Use only the specified power cord and connector. Refer to a qualified service technician for changes to the cord or connector.

Operation of product: Avoid electric shock by contacting a qualified service technician to replace fuses inside the product. Do not operate without the covers and panels properly installed. Do not operate in an atmosphere of explosive gases.

Safety instructions: Read all installation instructions carefully before you plug the product into a power source.

Terms on product:	CAUTION	A personal injury hazard exists that may not be apparent. For example, a panel may cover the hazardous area. Also applies to a hazard to property including the product itself.
	DANGER	A personal injury hazard exists in the area where you see the sign.

Care of product: Disconnect the power plug by pulling the plug, not the cord. Disconnect the power plug if the power cord or plug is frayed or otherwise damaged, if you spill anything into the case, if product is exposed to any excess moisture, if product is dropped or damaged, if you suspect that the product needs servicing or repair, and whenever you clean the product.

Ground the product: Plug the three-wire power cord (with grounding prong) into grounded AC outlets only. If necessary, contact a licensed electrician to install a properly grounded outlet.

Symbols as marked on product:

DANGER high voltage:



Protective ground (earth) terminal:



Use caution. Refer to the manual(s) for information:



WARNING: If the product loses the ground connection, usage of knobs and controls (and other conductive parts) can cause an electrical shock. Electrical product may be hazardous if misused.

Service safety summary

For qualified service personnel only: Refer also to the preceding Users Safety Summary.

Do not service alone: Do not perform internal service or adjustment of this product unless another person capable of rendering first aid or resuscitation is present.

Use care when servicing with power on: Dangerous voltages may exist at several points in this product. To avoid personal injury, do not touch exposed connections and components while power is on.

Disconnect power before removing the power supply shield, soldering, or replacing components.

Do not wear jewelry: Remove jewelry prior to servicing. Rings, necklaces, and other metallic objects could come into contact with dangerous voltages and currents.

Power source: This product is intended to operate from a power source that will not apply more than 120 or 250 volts rms (depending on printer model) between the supply conductors or between either supply conductor and ground. A protective ground connection by way of the grounding conductor in the power cord is essential for safe operation.

Contents

General Information 1

- The Phaser 1235 Color Printer 2
 - Printer RAM and printer capabilities 4
 - CRU life counter behavior 4
- Print engine assemblies 5
- The image processor board 11
 - The control panel 12
 - On Line LED 12
 - ! Fault 12
 - Rear panel 13
 - Accessing special operating modes 14
 - System controller board LEDs 14
 - Paper tray type sensing 15
- Specifications 16
 - Regulatory specifications 19

Error Codes and Messages 21

- Error messages 21

Troubleshooting 31

- Power on self-diagnostic test 32
- Print engine troubleshooting 33
 - Testing the print engine 33
 - Verifying printer operation by using its self-test print 34
 - Verifying power supply operation 34
 - Measuring power supply voltages 34
 - Inspecting the low-voltage power supply fuse 36
 - Safety interlocks 36
 - Testing for a shorted motor 37
 - Motor and fuser roller resistances 38
 - Media jams and the paper path 39
- Media-based problems 39
 - Media problems 39
 - Multiple-sheet pick 39
 - The media skews passing through the paper path 40
 - Paper tray indicates it is empty when it is not 40

Jams	41
Wrong media	41
Paper jams at the paper tray	41
Manual bypass feeder feed jams	42
Paper jams at the registration rollers	42
Paper jams at the transfer belt	42
Fuser jams	43
Eject jams	43
Jams in the duplex unit	43
No drum imaging unit installed	44
Imaging drum unit up/down error	44
Fan error	44
Fuser unit error	45
Other problems	46
The printer continuously displays “Booting” or “Initializing.”	46
False “No toner cartridge installed” message	46
False “No fuser unit installed” message	46
Front door indicated being open when it is closed	47
High temperature error	47
Low temperature error	47
Invalid memory DIMM	47
Printing and print quality problems	48
Light or blurred images	48
Dark, stained background	49
Blank print	50
Black stripe in direction of paper travel	51
White stripe in direction of paper travel	52
Poor fusing, toner offsetting	53
Repeating defect or voids on print	54
Missing characters or voids in print	55
Color misalignments	56
Unexpected colors	57
Image is skewed on the paper	58
Image is not centered on the print	58
The print is wrinkled	58
Macintosh printing problems	59
Image never prints	59
Image is rotated 90 degrees	59
Image prints in black-and-white	59
Printer isn't in the Chooser	60
Windows printing problems	60
Image never prints	60

Service Tests and Adjustments 61

- Diagnostics mode 61
 - Switch scan test 63
 - LED head test 68
 - Motor and clutch tests 69
 - Test printing 71
 - Consumable count initialization 73
 - Consumable counter display 75
 - Consumable continuation counter display 76
 - Adjusting color density and balance 77
 - Printing a Test Page 77
 - Interpreting the Color Balance test print 77
 - What to look for 78
 - Making adjustments 78
 - Adjustment recovery 79

Cleaning and Maintenance 81

- Service preventive maintenance procedure 81
- Recommended tools 82
- Periodically replaced parts 82
- Cleaning 83
 - Cleaning the LED bar 83
 - Cleaning the pickup roller 83

Resetting NVRAM 85

FRU Disassembly 87

- Cabinet panels 87
 - Top cover 87
 - Left-side cover 88
 - Right-side cover 89
 - Rear cover 90
 - Front cover 91
 - Face-up tray 92
- Frames components 93
 - Right shield plate 93
 - Electrical chassis (card cage) 94
 - Electrical chassis cooling fan 96
 - Printer unit chassis 97
 - Main cooling fan 99
 - Top cover inner frame 100
 - Left/right top cover spring assembly 103
 - Left paper tray guide assembly 104
 - Right paper tray guide assembly 106

Left plate assembly	108
Electronic boards	109
System controller board	109
Print engine controller board	110
Toner sensor board	111
Entrance sensor board	113
High voltage power supply	114
Low voltage power supply	116
Control panel	117
Paper feed components	118
Tray 1 feed roller and nudger roller	118
Retard pad	119
Paper-size sensing board	120
Paper-size sensing actuator	122
Main feeder assembly	123
Tray 1 no-paper/low-paper sensors	125
Paper tray lift arm roller	126
Multi-sheet bypass feeder components	127
Multi-sheet bypass feeder	127
Multi-sheet bypass feeder entrance sensor actuator	129
Paper transport components	130
Tray 1 entrance sensor actuator	130
Belt entrance sensor actuator	131
Transfer belt unit	132
Registration components	133
Registration clutch	133
Registration motor assembly	134
Registration roller assembly A and drive gear	135
Registration roller assembly B	137
Exit assembly and fuser components	139
Fuser unit	139
Fuser latching handle (left)	140
Fuser latching handle (right)	141
Fuser exit roller	142
Exit sensor assembly	144
Duplex guide assembly	146
Eject guide assembly	148
Stack full sensor	149

Drive assembly components	151
Main motor assembly	151
Main feeder drive motor	153
Transfer belt motor assembly	154
Xerographic components	156
Shutter plate	156
Color registration sensor assembly	157
Color registration solenoid	158
LED assembly	159
Drum contact assembly	160
Toner sensor actuators	161
Duplex unit	163
Optional paper feeder components	164
Idler roller assembly	164
Inner frame	166
Feeder clutch	169
Feeder motor	171
Feeder control board	173
Paper transport roll guide	175
Feeder drive assembly	177
Paper size sensing actuator	179
Paper size sensing board	180
Lower connector	181
Upper connector	183
Tray 2/3 feed roller and nudger roller	185

FRU List 187

 Using the parts list 187

Test Prints 211

Wiring Diagram 215

Figures

The Phaser 1235 Color Printer with lower tray feeders	1
Print engine circuit boards	5
Print engine circuit boards (cont'd)	6
Print engine sensor and switch locations	7
Print engine sensor and switch locations (cont'd)	8
Print engine motors, clutches and solenoids	9
Optional feeder motor and clutch	10
Features of the controller board	11
The control panel	12
The printer rear panel	13
Tray switch sensors and actuators	15
Door safety interlock switches	37
LED Head Test Pattern	68
Print problem caused by dirty LED lens	83
Removing the top cover	87
Removing the left-side cover	88
Removing the right-side cover	89
Removing the rear cover	90
Removing the front cover	91
Removing the face-up tray	92
Removing the right shield plate	93
Removing the electrical chassis	95
Removing the electrical chassis cooling fan	96
Disconnecting the registration motor in-line connector (HOPFF)	97
Removing the printer unit chassis	98
Removing the main cooling fan	99
Removing the top shield plate	100
Removing the harnesses from the electrical chassis	101
Removing the top cover inner frame	102
Removing the left/right top cover spring assembly	103
Removing the lower plate assembly	104
Removing the left paper tray guide assembly	105
Removing the paper tray guide assemblies	106
Removing the right paper tray guide assembly	107
Removing the left plate assembly	108
Removing the system controller board	109
Removing the print engine controller	110
Disconnecting the LED power harnesses	111
Removing the toner sensor board	112

Removing the entrance sensor board 113
Removing the high voltage power supply 115
Removing the low voltage power supply 116
Removing the control panel 117
Removing the feed roller and nudger roller 118
Removing the retard pad 119
Removing the paper size sensing board 121
Removing the paper size sensing actuator 122
Removing the main feeder assembly 124
Removing the lower plate assembly 125
Removing the paper tray lift arm roller 126
Removing the multi-sheet bypass feeder 128
Removing the multi-sheet bypass feeder entrance sensor actuator 129
Removing the tray 1 entrance sensor actuator 130
Removing the belt entrance sensor actuator 131
Removing the transfer belt unit 132
Removing the registration clutch 133
Removing the registration motor assembly 134
Removing the registration roller assembly A and drive gear 136
Removing the registration roller assembly B 138
Removing the fuser unit 139
Fuser latching handle (left) 140
Removing the fuser latching handle (right) 141
Removing the fuser exit roller 143
Removing the exit sensor assembly 145
Removing the duplex guide assembly 147
Removing the eject guide assembly 148
Removing the LED Assembly power connector 149
Removing the stack full sensor 150
Removing the main motor assembly 152
Removing the main feeder drive motor 153
Removing the transfer belt motor assembly 155
Removing the shutter plate 156
Removing the color registration sensor assembly 157
Removing the color registration solenoid 158
Removing an LED assembly 159
Removing the drum contact assembly 160
Disconnecting the LED assembly power harness 161
Removing the toner sensor actuators 162
Removing the duplex unit 163
Removing the feeder control board cover 164
Removing the idler roller assembly 165
Removing the optional feeder inner frame bottom screws 166

Removing the feeder control board cover	167
Removing the optional feeder inner plate	168
Removing the feeder control board cover	169
Removing the feeder clutch	170
Removing the feeder control board cover	171
Removing the feeder motor	172
Removing the feeder control board cover	173
Removing the feeder control board	174
Removing the feeder control board cover plate	175
Removing the paper transport roll guide	176
Removing the feeder control board cover plate	177
Removing the feeder drive assembly	178
Removing the paper size sensing actuator	179
Removing the paper size sensing board	180
Removing the feeder control board cover plate	181
Removing the lower connector	182
Removing the feeder control board cover plate	183
Removing the upper connector	184
Removing the tray 2/3 feed roller and nudger roller	185
Cabinet FRUs	189
Top cover FRUs	191
Printer chassis FRUs (1 of 2)	193
Printer chassis FRUs (2 of 2)	195
Paper tray FRUs	197
Paper tray guide FRUs	199
Multi-sheet bypass feeder FRUs	201
Electrical components FRUs	203
Duplexer unit	205
Lower Tray Assembly FRUs	207
Wiring diagram (part 1 of 3)	215
Wiring diagram (part 2 of 3)	216
Wiring diagram (part 3 of 3)	217
Wire routing at the engine controller board	218
Wire routing at the top of the engine controller board	219
Detail of wiring passthru	220
Wiring under the top shield plate	221

Tables

Entering special operating modes	14
Paper size detection	15
Physical dimensions	16
Printer clearances	16
Functional specifications	17
Electrical specifications	18
Environmental specifications	18
Printer fault messages	21
POWER Connector pinout	35
Motor and fuser roller resistances	38
Engine maintenance mode menu	62
Switch scans and the sensor and switches test	64
Motor and clutch test constraints	69
Test Print menu	71
Table 1: Initialization items - consumables	73
Table 2: Initialization items - calibration points	74
Consumable counter menu items	75
Consumable life-cycle counts	76
Periodically replaced parts	82
FRU parts list of the printer cabinet	188
FRU part list of the top cover assembly	190
FRU part list of the printer chassis (1 of 2)	192
FRU of the printer chassis (2 of 2)	194
FRU of the paper tray	196
FRU of the paper tray guide	198
FRUS of the multi-sheet bypass feeder	200
Electrical components FRUs	202
FRUs of the duplexer unit	204
FRUs of the Lower Tray Assembly	206
Hardware kit	208
Gear kit	208
Sensor flag kit	209
Harness kit	209
Customer replaceable consumables	210