

TMG3202 AC Quick Installation Guide


1 Items not included in this box that you will need:

- Two AC power cords
- 19" equipment rack

2 In the box, you will find:


- One TMG3202
- One set of mounting brackets with screws
- One DB-9 to RJ-45 adapter
- SCSI Cables and Patch Panels, if applicable
- Two CAT5 Ethernet Cables (male-male)
- One warranty sheet
- One packing slip
- One TMG3202 Quick Installation Guide

3 A) Install rack-mounting hardware on TMG3202 and install on equipment rack.
 B) Connect Ethernet port to Linux Host.

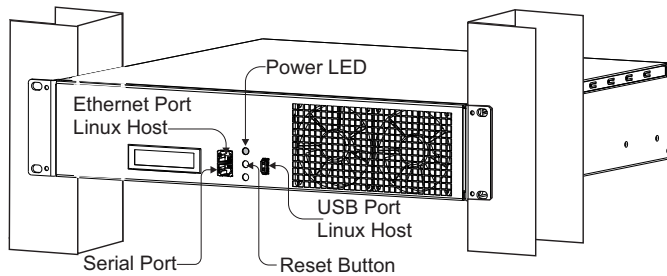

4 Connect to VoIP network.

*NOTE:
 Ethernet ports (ETH-1&2), and
 TMS ports (TMS-1&2) are
 unused.

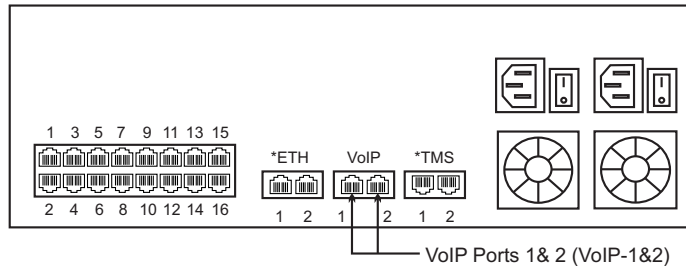

TelcoBridges, On a Blade, System-Blade, TB-1+1 Solution, TB-16-E1/T1/J1, TB640-DS3, TB640-E1/T1/J1, TB640-OC3/STM-1, TB-8-E1/T1/J1, TB-IVR Mezzanine, TB-Multi-Blade, TB-Multi-Blade Mezzanine, TB-N+1-15 Solution, TB-N+1-3 Solution, TB-StreamServer, TBVideo, TB-VoIP Mezzanine, TM-1000 Network Probe, Tmedia, TMP6400, TMG3200 are trademarks of TelcoBridges Inc. All rights reserved 2007. All other trademarks are property of their owners. Information subject to change without notice. 9010-00183-2A, Issue 2




TMG3202 AC Quick Installation Guide

5


Connect to PSTN Network, using one of the following options:

- RJ-45 Interface (T1/E1/J1)
- SCSI Interface (T1/E1/J1), a patch panel is provided
- Dual BNC (DS3)
- Optical Interface (OC3/STM-1)


RJ-45

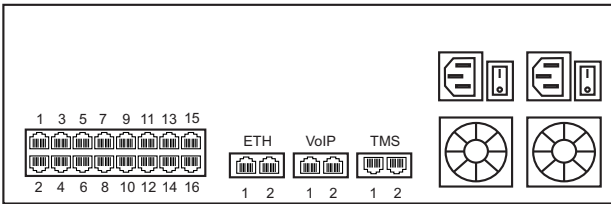


SCSI

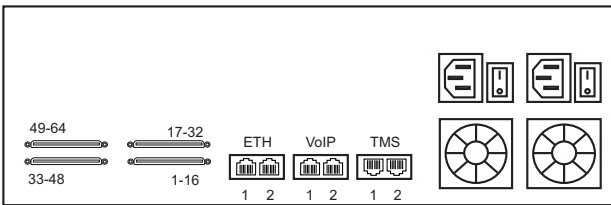

DS3

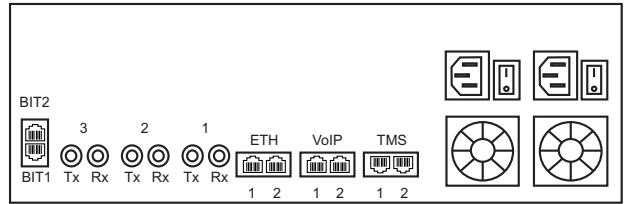

STM 1

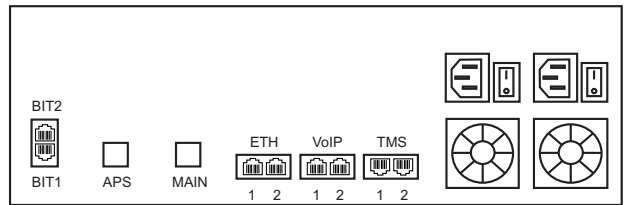


6

A) Connect to two independent power sources (if only one power source is used, press the green button at the rear of the unit to disable the audible alarm).

B) Turn on power.

C) Verify Power LED = Solid Green (Refer to Panel 3)

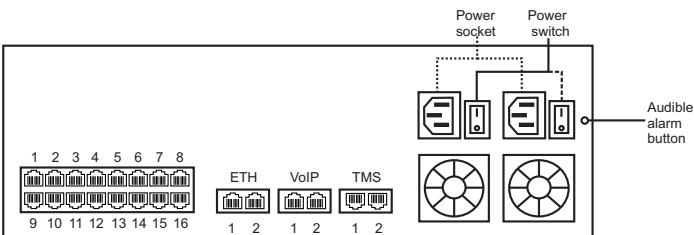

7

A. Connect to the Linux host through management Ethernet OR serial connector. The IP address of the management port is assigned through DHCP. If DHCP is not available, use the serial cable to connect to the TMG Linux Host for the first time.

B. Default HOSTNAME is the Linux Host serial number, which can be found on the packing slip.

C. Default username and password are "root":"root" to log onto the Linux OS. Navigate to: [HTTP://HOSTNAME:12358](http://HOSTNAME:12358), to configure the TMG3202.

Next Steps? Refer to the TMG3200 documentation set for information on configuring and administering your TMG3202.