

Flexible Camera Series



Installation & Operation Manual

ClearOne.
You're Virtually There™

ClearOne, formerly VideoLabs



Table of Contents

Introduction	1
Professional services	1
Product registration	2
Product returns	2
Unpacking Cameras	2
FlexCam™	2
TeachCam®	3
StudentCam®	4
IDCam™	4
Making Connections	5
To connect camera to a TV, VCR, or projector	5
To connect camera to a computer	6
Using the Camera	6
General usage	6
Using the TeachCam	7
Using the StudentCam and IDCam	8
Camera Care	9
Handling the camera	9
Operating and storage conditions	10
Appendix	11
Optional accessories	11
Troubleshooting	11
Specifications	12
Camera comparison	13
Warranty	14
Compliance	16

Flexible Camera Series Installation and Operation Manual
ClearOne Part No. 800-171-101 February 2003 (Rev. 2.0)

© 2003 ClearOne Communications, Inc, formerly VideoLabs. All rights reserved. No part of this document may be reproduced in any form or by any means without written permission from ClearOne. Printed in the United States of America. ClearOne reserves specific privileges. Information in this document is subject to change without notice.



Introduction

Flexible cameras are compact, precision instruments designed by ClearOne, formerly VideoLabs, for accuracy, ease of use, and maximum flexibility. The Flexible Camera Series meets the highly specialized needs of the educational and security industries.

This manual provides usage information for the following cameras: FlexCam, TeachCam, StudentCam, and IDCam. Please read these instructions carefully and keep this manual for future reference.

Professional services

If you need any additional information on how to install, set up, or operate your camera, please contact us. We welcome and encourage your comments so we can continue to improve our products and serve your needs.

ClearOne Communications ~ 1825 Research Way ~ Salt Lake City, UT 84119

Technical Support

Tel: 1-800-283-5936(USA) or 1-801-974-3760
Fax: 1-801-977-0087
E-mail: tech.support@clearone.com
Web: www.clearone.com

Sales and Customer Service

Tel: 1-800-945-7730 (USA) or 1-801-975-7200
Fax: 1-800-933-5107 (USA) or 1-801-977-0087
E-mail: sales@clearone.com

Sales and Customer Service (International)

Unit 4 Hernes Estate
Greys Road
Henley on Thames
Oxfordshire, United Kingdom, RG9 4NT

Tel: 44 (0) 1491 414430
Fax: 44 (0) 1491 579137
E-mail: global@clearone.com

Product registration


Please register your camera using the online registration form in the Product section at www.clearone.com. We are better able to provide technical assistance when your product is properly registered. Registration information is also used to notify you of upgrades and new product information.

Product returns

All product returns require a return authorization (RA) number. Please contact ClearOne Technical Support before attempting to return your product. Make sure you return all the items that shipped with your product and include a brief description of how the product was being used when the problem occurred.

Unpacking Cameras

Unpack camera, cables, and accessories. Carefully place camera unit on a level surface. Ensure you have received all parts by referencing the descriptions provided for your specific camera.

 ClearOne is not responsible for product damage incurred during shipment. You must make claims directly with the carrier. Inspect your shipment carefully for obvious signs of damage. If the shipment appears damaged, retain the original boxes and packing material for inspection by the carrier. Contact your carrier immediately.

FlexCam™

This full-motion analog camera can be used to take color pictures, make color movies, and view three-dimensional objects, documents and photographs. It's also ideal for videoconferencing and comes standard with a 5.57mm, D-mount lens.

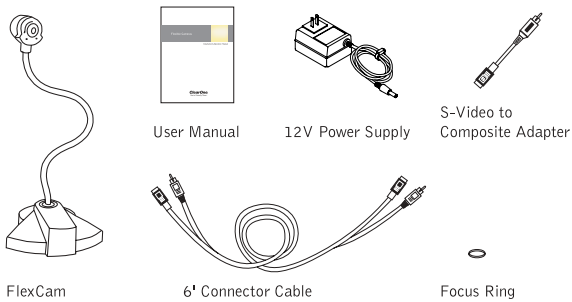


Figure 1. FlexCam and accessories.

TeachCam®

This camera displays precise images, slides, and small scientific objects under any lighting. The TeachCam is a full-motion, color, S-video/analog camera featuring an 8mm, C-mount lens with 1:56 aperture. A self-contained lightbase enables viewing of 35mm slides and microscope slides.

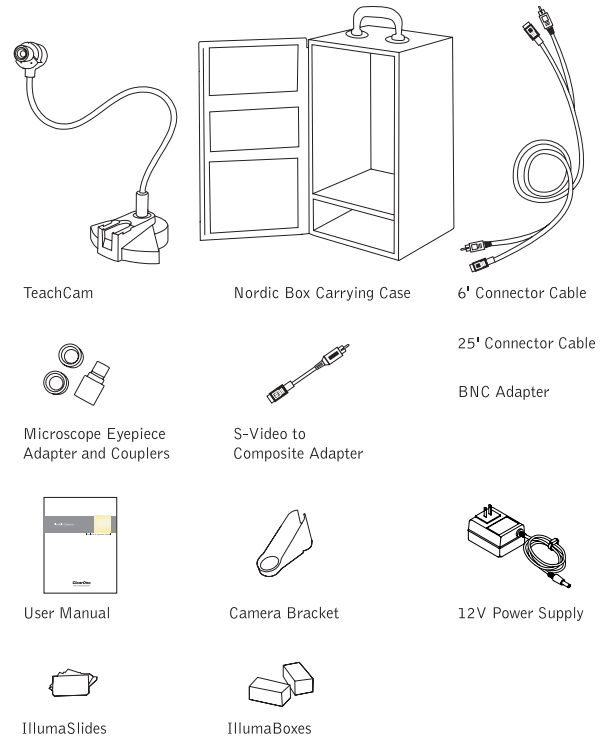


Figure 2. TeachCam and accessories.

StudentCam®

This camera displays precise images, slides, and small scientific objects under any lighting. The StudentCam is a full-motion, color camera that is S-video and composite compatible and features an 8mm, C-mount lens with 1:5.6 aperture.

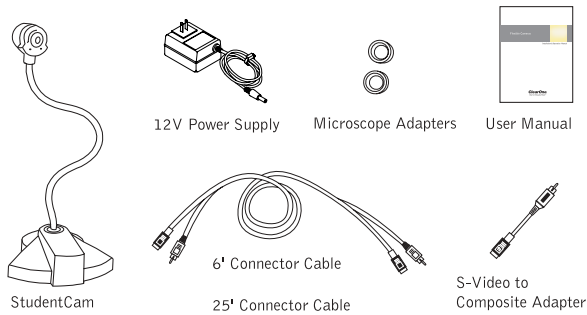


Figure 3. StudentCam and accessories.

IDCam™

The IDCam is used for taking head and shoulders photos and is compatible with most ID badging systems. The IDCam is a full-motion, S-video, color analog camera and comes standard with a 16mm, C-mount lens with 1:1.6 aperture.

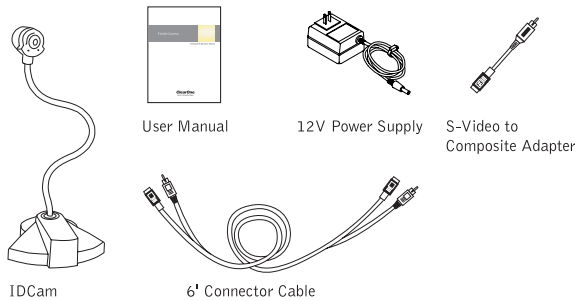


Figure 4. IDCam and accessories.

Making Connections

The FlexCam, TeachCam, StudentCam, and IDCam connect to video display devices (TV, VCR, projector, computer, etc.) using the 6' cable (25' included with select models) with S-video and audio connectors on both ends.

To connect camera to a TV, VCR, or projector

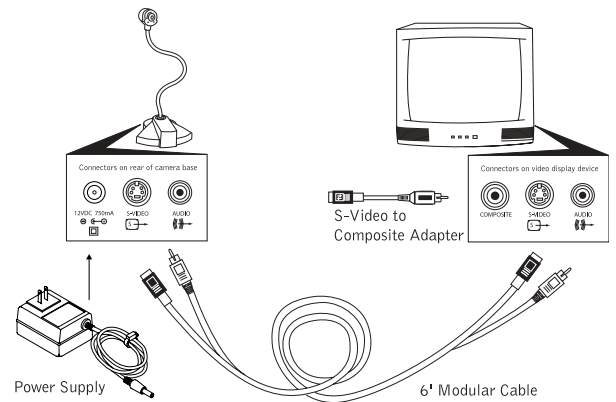


Figure 5. Connection diagram

1. Connect the S-video and Audio plugs to the S-video and Audio out jacks on the camera base.
 2. Connect the other end of the cable to the Audio and S-video jacks on the video display device.
 3. If the TV or VCR does not have S-video capabilities and requires a composite signal, connect the S-video to Composite Adapter to the S-video cable and plug it into the RCA jack on the TV or VCR.
 4. Plug the power supply into an electrical outlet or grounded power strip. Connect the power supply cable to the camera.
- ! Use only the wall mount power supply provided. Using a different power supply may cause the camera to malfunction or may damage the camera.

To connect camera to a computer

When connecting to computers, ensure that the video capture card and all necessary software programs and drivers are installed correctly. Consult the user manual for your video capture card or USB adapter for instructions on connecting the camera.

Using the Camera

General usage

Turning on the camera

Turn on your camera with the on/off switch located at the base of the gooseneck.

Positioning the camera

The camera head is swivel mounted. Do not turn it past the natural resistance. Adjust the flexible gooseneck (maximum 90°) until the camera is aligned with the subject.

Using the microphones

A highly sensitive microphone is located under the lens on the camera head. Audio levels are optimal when the camera is pointed toward the person speaking, at an arm's distance away. If the speaker's image moves out of the picture, the sound level will begin to drop off.

Focusing the image

Check the contrast, brightness, and white balance of your monitor or screen before focusing your subject in the presentation room.

Turn the focus ring to the left for close-up, right for distance. The FlexCam camera includes a larger focus ring. Attach the focus ring by carefully pushing the smaller end of the ring onto the focus knob at the center of the camera head. (The focus ring will not be flush with the camera head.)

Displaying the image

On a TV

When the camera is properly connected to the TV, switch the TV to video mode. To change to video mode, use either the switch on the TV front panel or press the corresponding button on the remote control. Consult the owner's manual that came with your TV for information on changing to video mode.



Not all TVs have Video Inputs. If your TV only has an Antenna input, you will need a Modulator or a VCR with video inputs.

With a VCR

Put the VCR in the video-in mode (consult your owner's manual for instructions). Turn the camera power on. Turn the VCR/TV switch to VCR and the TV to either channel 3 or 4 (whichever is not used as a broadcast station in your area).

Using the microscope adapter and couplers

The microscope adapter kit includes a custom metal eyepiece adapter with 28mm and 34mm plastic couplers. To use the custom eyepiece adapter, remove the microscope eyepiece and replace it with the custom eyepiece adapter by sliding the narrow end into place in the microscope. Gently push the 8mm C-mount lens into position. Plastic couplers (28mm and 34mm) can be attached to a microscope by placing the coupler over the microscope's original eyepiece. Turn the C-mount lens to the right before placing in the coupler for viewing. Please note that the IDCam and FlexCam do not have a microscope adapter or couplers.

Using the TeachCam

About the IllumaSlides







Five IllumaSlides are included with the TeachCam. Remove the cover on the slide and add various specimens, such as drops of pond water, for viewing. To use the IllumaSlides, attach the camera bracket to the bottom of the gooseneck. Place the camera head into the camera bracket and turn on the IllumaBase. Place the IllumaSlide on the top of the IllumaBase and adjust the focus as needed.

About the IllumaBoxes

Two IllumaBoxes are included with the TeachCam. The rectangular plastic box holds laboratory specimens for viewing. To use the IllumaSlides, attach the camera bracket to the bottom of the gooseneck. Place the camera head into the camera bracket and turn on all the IllumaBase lights. Place the specimen in the box and close the box lid tightly. Next, with cover side up, insert the plastic box lengthwise into the IllumaBase and adjust the focus as needed.




IllumaBase® keypads

There are six buttons on the two IllumaBase keypads on the TeachCam. Below is a list of their functions.

Button	Function
	This button controls base lighting. Press once for side lights, a second time for bottom lights, a third time for all lights, and a fourth time for lights off.
	Press and hold this button to decrease image brightness.
	Press and hold this button to increase image brightness.
	Press button once to color balance on a particular scene. Press the button again to return camera to automatic white balance.
	Press this button to eliminate image flickering and color hunting when camera is used with a fluorescent microscope. In flickerless mode, you may need to adjust the iris on the microscope to reduce the amount of light.
	Press this button to view a negative color image. Press the button again to switch to a normal color image. If you press and hold the button for two seconds, the image will switch from color to black and white. Press and hold the button again for two seconds to switch the image back to color.

Using the StudentCam and IDCam

The StudentCam and IDCam each have a three-button keypad for brightness and flicker control.

Button	Function
	Press and hold this button to increase image brightness.
	Press and hold this button to decrease image brightness.
	Press this button to eliminate image flickering and color hunting when camera is used with a fluorescent microscope. In flickerless mode, you may need to adjust the iris on the microscope to reduce the amount of light.

Camera Care

Handling the camera

- All ClearOne cameras are for indoor use only.
- Use only ClearOne power supply and a wall-mounted, electrical outlet.
- Do not use cameras next to food or beverages. Cameras have been tested and approved for use in chemistry labs. However, be very careful not to spill liquid or dry chemicals, or solvents on the camera.
- Do not use cameras right next to working TVs, radios, motors, transformers or magnetic fields.
- Avoid touching the lens. To clear any dust, blow pressurized air onto the lens. For accidental smears or smudges, wipe carefully with a lens cleaning cloth.
- Clean exterior of camera by wiping with a clean, damp cloth; do not use any abrasive chemicals.
- Use both hands whenever adjusting the neck of the camera; this will avoid any unnecessary strain on the camera's base and will keep the camera from tipping over unexpectedly.
- Do not attempt to take the camera apart. There are no user-serviceable components inside.

Camera base

The camera base has five rubber feet for non-slip support of the camera.

Camera head

This pre-assembled unit contains the camera lens, lens holder, focus ring attachments, connections to gooseneck and all cables. Do not turn camera head more than 30° left or 30° right.

Camera lens and lens holder

The camera lens is held in place by the lens holder. Both are permanently attached to the camera head. Do not try to rethread or unscrew the lens holder.

Gooseneck

Use the gooseneck to adjust the camera head/camera lens over the projected image. Do not bend the gooseneck more than 90° in any direction or attempt to tie it in a knot. Do not attempt to repair any cracks in the vinyl coating. The gooseneck is non-detachable and should be replaced only by ClearOne.

Warnings

- Internal thermal protection is built-in. Use only the provided power supply. Using a different power supply will void the warranty.
- Do not loosen or remove exterior assemblies (keypads, electrical connectors, audio units, or camera lens).
- Do not disassemble any exterior or interior components of any camera.
- Any camera lens will be permanently damaged if it is over-tightened.

Operating and storage conditions

Do not store or operate the camera under the following conditions:

- Outdoors or connected to outdoor or auxiliary power sources.
- At temperatures above 104°F(40°C) or below 32°F(0°C).
- In environments with high humidity.
- In dusty environments.
- In inclement weather.
- Under severe vibration.

Appendix

Optional accessories

Contact your ClearOne reseller for more information on the following accessories.

FlexLite™

The FlexLite is designed for use with any flexible camera. Dual flexneck top lights attach to the base of your FlexCam to provide adequate lighting for all subjects. Available in 110V (NTSC) and 220V (PAL) versions.

C-mount lens models

C-mount lenses are available in 3.5mm, 6mm, 8mm, 12mm, 16mm, 25mm and 50mm sizes. If additional C-mount lenses are purchased, install them by unscrewing the old lens counterclockwise, and screwing in the new lens clockwise. Be extremely careful not to crossthread the new lens into the lens holder.



Most ClearOne Flexible Cameras use C-mount lenses. C-mount is an industry lens size standard.

USB adapter

Use the USB adapter for Internet videoconferencing, motion video capture, still frame capture, and video editing.

Troubleshooting

If you are experiencing problems with your camera, check the following items:

- Ensure all camera adapter/cable connections and electrical connections are done correctly and completely.
- Check your computer, video capture cards, digitizer boards, VCR, TV, etc., for faulty operation.
- Check all settings on your camera and adjust them for viewing conditions in the presentation room.
- If any component of any camera is damaged, contact ClearOne Technical Support for repair information.

Specifications

Image Pick-up Device
1/4" CCD

TV System
NTSC, PAL

Total Pixels
NTSC: 542(H) x 492(V)
PAL: 542(H) x 582(V)

Number of Effective Pixels
NTSC: 512(H) x 492(V)
PAL: 512(H) x 582(V)

Number of Scanned Lines
NTSC: 525 lines
PAL: 625 lines

Frames per Second
NTSC: 30fps
PAL: 25fps

Resolution
Horizontal
NTSC, PAL: Minimum 330 TVL
(center area)
Vertical
NTSC: Minimum 350 TVL (center area),
PAL: Minimum 400 TVL

S/N Ratio
46dB: Condition: AGC off, weight on

Minimum Illumination
3 lux at F2.0

White Balance
Auto

Iris
Electronic

Gain Control
Auto

Sync. System
Internal only

Power Supply
12VDC

Operating Temperature
-10°C to 50°C/14°F to 122°F

Storage Temperature
-20°C to 60°C/-4°F to 140°F

Indicator
Power On/Off LED

Audio
Integrated condenser microphone with pre-amplifier for line-level output

Connectors
1 S-video output
1 Line-level (audio) output
1 Power input

Specifications are subject to change without notice.

Camera comparison

Feature	FlexCam	StudentCam	TeachCam	IDCam
NTSC	*	*	*	*
PAL	*	*	*	*
Image Sensor	1/4" CCD	1/4" CCD	1/4" CCD	1/4" CCD
No. of Scanned Lines (NTSC)	525	525	525	525
No. of Scanned Lines (PAL)	625	625	625	625
Horizontal Resolution (min)	330TVL	330TVL	330TVL	330TVL
Lux (min)	3	3	3	3
Video Output	S-video	S-video	S-video	S-video
C-Mount Lens		8mm	8mm	16mm
D-Mount Lens	5,57mm			
Focal Length	1/4" to 50'	1/4" to 50'	1/4" to 50'	11" to 50"
Electronic Iris	*	*	*	*
Brightness Control		*	*	*
Flickerless Control		*	*	*
White Balance Manual / Auto			*	
Color Positive / Negative			*	
Flexneck	18"/45cm	20"/51cm	27"/68.5cm	20"/51cm
Exterior Color	Platinum	Black	Black	Black
Integrated Microphone	*	*	*	*
6' A/V Cable	*	*	*	*
25' A/V Cable		*	*	
3 Microscope Adapters		*	*	
S-video to Composite Adapter	*	*	*	*

Warranty

ClearOne Communications, Inc. (Manufacturer) warrants that this product is free of defects in both materials and workmanship. Should any part of this product be defective, the Manufacturer agrees, at its option, to:

- A. Repair or replace any defective part free of charge (except transportation charges) for a period of two years from the date the end user is invoiced for the product, provided the end user returns the product to ClearOne Communications or an authorized ClearOne dealer according to the Product Return and Repair Policy set forth below;
- B. Furnish replacement for the flexible neck assembly for a period of five years from the date the end user is invoiced for the product, provided the end user provides proof of purchase that demonstrates that the product is still within the warranty period. Replacement parts shall be furnished without charge, except labor and transportation.

This warranty excludes assembled products not manufactured by the Manufacturer whether or not they are incorporated in a Manufacturer product or sold under a Manufacturer part or model number.

Product Return and Repair Policy

Return to Manufacturer

- a. An RA (return authorization) number must be issued to the end user from ClearOne Technical Support.
- b. The end user must return the product to ClearOne with proof of purchase (showing purchase date) for a warranty claim, and display the RA number on the outside of the shipping package.

THIS WARRANTY IS VOID IF:

- A. The product has been damaged by negligence, accident, act of God, or mishandling, or has not been operated in accordance with the procedures described in the operating and technical instructions; or,
- B. The product has been altered or repaired by other than the Manufacturer or an authorized service representative of the Manufacturer; or,
- C. Adaptations or accessories other than those manufactured or provided by the Manufacturer have been made or attached to the product which, in the determination of the Manufacturer, shall have affected the performance, safety or reliability of the product; or,
- D. The product's original serial number has been modified or removed.

NO OTHER WARRANTY, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR USE, APPLIES TO THE PRODUCT. MANUFACTURER'S MAXIMUM LIABILITY HEREUNDER SHALL BE THE AMOUNT PAID BY THE END USER FOR THE PRODUCT. No person or entity authorized to

assume any obligation or other liability in connection with the products. No action, regardless of form, arising out of or relating to the product or this warranty, may be brought by end user more than one (1) year after the cause of action has accrued.

Manufacturer shall not be liable for punitive, consequential, or incidental damages, expenses, or loss of revenue or property, inconvenience, or interruption in operation experienced by the end user due to a malfunction in the purchased product. No warranty service performed on any product shall extend the applicable warranty period.

In case of unsatisfactory operation, the end user shall promptly notify the Manufacturer at the address set forth below in writing, giving full particulars as to the defects or unsatisfactory operation. Upon receipt of such notice, the Manufacturer will give instructions respecting the shipment of the product, or such other matters as it elects to honor this warranty as above provided. This warranty does not cover damage to the product during shipping and the Manufacturer assumes no responsibility for such damage. All shipping costs shall be paid by the customer.

This warranty extends only to the original end user and is not assignable or transferable. This warranty is governed by the laws of the State of Utah, without regard to the conflicts of interests provisions thereof.

ClearOne Communications, Inc.
1825 Research Way
Salt Lake City, Utah 84119

Compliance

FCC Part 15 Compliance

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his/her own expense.

Changes or modifications not expressly approved by ClearOne Communications Inc. could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Safety Information

! CAUTION: Users should not attempt to make such connections themselves, but should contact the appropriate electrical inspection authority, or electrician, as appropriate.

European Compliance

This equipment has been approved in accordance with Council Directive 1999/5/EC "Radio Equipment and Telecommunications Equipment."



Conformity of the equipment with the guidelines below is attested by the CE mark.

EC Declaration of Conformity

Application of Council Directive(s):	1999/5/EC Radio equipment and Telecommunications Terminal Equipment (R&TTE) Directive
Manufacturer's Name:	ClearOne Communications, formerly VideoLabs
Manufacturer's Address:	1825 West Research Way Salt Lake City, Utah 84119 U.S.A.
Model No.:	Flexible Camera Series (FlexCam, StudentCam, TeachCam and IDCam)

Standard(s) to which Conformity is declared:

89/336/EEC "Electromagnetic Compatibility (EMC) Directive":

EN 55022: 1998 (Emissions)	Specification for limits and methods of measurement of radio interference characteristics of information technology equipment.
EN 61000-3-2:1995/A1/A2:1998	Part 3: Limits - Section 2: Limits for harmonic current emissions.
EN 61000-3-3:1995	Section 3: Limitation of voltage fluctuations and flicker in low voltage supply systems for equipment with rated current up to and including 16 A.
EN 55024: 1998 (Immunity)	Information technology equipment - Immunity characteristics - Limits and methods of measurement.
EN 61000-4-2: 1995/A1:1998	Electrostatic Discharge
EN 61000-4-3: 1996/A1:1998	Radiated RF Immunity
EN 61000-4-4: 1995	Electrical Fast Transients
EN 61000-4-5: 1995	Lighting Surge
EN 61000-4-6: 1996	Conducted RF Immunity
EN 61000-4-8: 1993	Radiated Magnetic Field Immunity
EN 61000-4-11: 1994	Voltage Dips and Voltage Interruptions

73/23/EEC "Low Voltage Directive (LVD)":

EN 60950: 1992	Safety of Information Technology Equipment, Including A1, A2, A3, A4 and A11 Electrical Business Equipment.
----------------	---